

LED Wash Zoom 36x12W RGBW Moving Head Lighting



1-Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

2-Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change

3-Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.

3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.

4. Power supply should not be changed over $\pm 10\%$ while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.

5. After power off, if it is need used again, please cool down over 20 minuter.

6. Please look round the manual for ensure the product can be used normally.

4-Technical parameters:

Power supply: AC100V-240V

Frequency: 50Hz-60Hz

Total power: 350W

Fuse: 7A

Light source power: 288w

Color temperature: 8500K

Average life: 2000h

Control signal: international standard DMX512

Appearance: high temperature resistant plastic + molded alloy material

Color of lamp body: Black

Protection class: IP20

Net weight 11.KG

5-Product Introduction

1. International standard control signal: DMX512

2. Number of channels: 16CH

3. Number of motors: 3 mute motors in total

4. LCD 650000 color touch TFT interface, easy to operate, beautiful interface, 180 degree reverse display.

5. Horizontal rotation of X axis 540° , vertical rotation of Y axis 270° , with automatic correction and positioning.

6. X-axis and y-axis operation are adjustable and micro adjustable. The software has the function of correction and positioning, with high accuracy!

7. Dimming: 0-100% linear adjustment

8. Stroboscopic: stroboscopic speed (1-30 times / second), complete linear dimming and variable stroboscopic speed

9. Focusing: with optical combination, the effect is far better than that of ordinary dye lamp, which can project high-definition effect

10. Overheat intelligent protection

11. intelligent dimming control (perpetual lamp source life)

6-Connection of DMX512 signal:

DMX512 signal control mode is used for this luminaire. The control signals of each luminaire are connected in parallel. When connecting multiple luminaire signals, it is better to use double core shielded cable. When connecting, each luminaire is connected through input and output of DMX signal Jack (XLR base) on the luminaire. The 3-core xlrxl plug terminals of the signal wires connecting the luminaire must correspond to each other. When connecting the luminaire signals It is suggested to use DMX signal terminator to avoid damaging control signal due to electric noise. DMX signal terminator is a 120 ohm 1W resistor connected between two and three pins of an XLR plug and connected to the output jack of the last lamp

7-Installation instructions of lamps:

The lamp can be placed horizontally, inclined and upside down. Pay attention to the installation method when inclined and upside down

1. Fixed installation of lamps: before positioning the lamps, ensure the stability of the installation site. When reversing the hanging installation, ensure that the lamps do not fall down on the support bracket. Use safety rope to pass through the support bracket and lamp handle for auxiliary hanging to ensure safety. Prevent the lamps from falling and sliding. During the installation and commissioning, pedestrians are not allowed to pass under the lamps. Regularly check whether the safety rope appears The manufacturer shall not bear any responsibility for all consequences caused by falling of lamps due to unstable installation of hanging

8-Safety tips!

To ensure your safe and correct use of the lamp, please read the following safety tips carefully before use, so as to avoid unnecessary faults and injuries

1. Non professional personnel shall not dismantle lamps and fittings in lamps without authorization

2. AC power supply: check whether the local power supply meets the rated voltage requirements of the product.

3. The luminaire is designed according to the type of electric shock protection. The luminaire shall be connected with the fully grounded power supply system, and the ground wire of the luminaire must be connected with the ground wire of the power supply system. Do not use the power wire with damaged insulation layer, and do not lap the power wire on other wires

4. When the luminaire is installed and positioned, the minimum distance between any point on the surface of the luminaire and any inflammable and explosive substance is 10 meters, and the distance from the irradiating substance is 2.5 meters. Please do not install the luminaire directly on the surface of inflammable substance.

5. Ambient temperature of the lamp: (- 10 ° C + 40 ° C), the maximum temperature of the lamp

surface is 80 ° C, and the lamp shall be far away from liquid substances and humid environment

6. Before using the lamp, make sure that the lamp is well grounded, and do not install or remove any parts of the lamp with electricity

7. When installing the lamp, the fixing screw must be fastened, safety cable shall be added, and regular inspection shall be carried out

8. It is recommended that the continuous working time of the lamp shall not exceed 10 hours, and the interval between continuous start of the lamp shall not be less than 10 minutes. Otherwise, the lamp will not trigger normally due to overheating protection of the bulb

9. In case of any abnormality during use, the lamp shall be stopped in time

10. When the bulb reaches the rated service life, it shall be replaced in time, otherwise it may cause a dangerous accident of bursting

11. The rotating parts and pasted accessories of the lamp must be inspected regularly, and the loose and shaking parts shall be reinforced in time to prevent accidents

12. The lamp is cooled by strong wind, which is easy to accumulate dust. It must be cleaned once a month, especially the air outlet for heat dissipation. Otherwise, it will be blocked due to dust accumulation, resulting in poor heat dissipation and abnormal lamp

9-Maintenance and guarantee:

Shut down operation: turn off the lamp source before power failure before shutdown. Let the heat dissipating fan discharge the heat generated in the lamp when used, so that the perpetual lamp fittings, especially the lamp source, can be extended. To ensure that lamps can be operated steadily, they should be kept clean, disassembled and repaired or started to maintain. Before the power is cut off, it is very important to keep the lamps clean and clean. You must clean regularly, not only keep the maximum brightness output, but also perpetual lamp life. It is suggested to use high quality glass cleaning agent and clean soft. Clean the interior of the lamp with a vacuum cleaner at least half a year

SHEHDS

Board Instruction

1. Set Up

Item	Description	
Set Up	DMX Address	001-512 Master&Slave: Receive DMX signal from console or host
	FraderDelay	ON/OFF
	Code Wheel	On Use encoder to judge out of step and correct position automatically Off Correct position without encoder
	No DMX signal	KEEP Continue to operate in the original state CLEAR Motor return, stop
	Screen Saver	ON turn off light in 30s OFF light on all the time
	Pan Reverse	ON/OFF
	Tilt Reverse	ON/OFF
	Load Default	ON/OFF
	Return	
Run mode	Sound Mode	ON/OFF
	AutoMode1	ON/OFF
	Auto Mode 2	ON/OFF
	Auto Mode 3	ON/OFF
	Auto Mode 4	ON/OFF
	Return	

2. SysInfo

Item	Description
SoftVer	V1.00
RunTime	Machine working time
SoftVer	V1.00
Temperature	Lamp temperature
Fan Status	Working state of fan
Return	

3.Manual

This interface is used to control the current lamps, neither belonging to the slave state machine state (not receiving DMX signal) nor to the host state (not sending DMX signal)

Item	Description	
Reset	YES/NO	
Pan	0-255	Adjust Pan motor
Tilt	0-255	Adjust Tilt motor
Focus	0-255	Adjust focus motor
First Lamp	0-255	RGBW dark--light
Second Lamp	0-255	RGBW dark--light
Third Lamp	0-255	RGBW dark--light
Fouth Lamp	0-255	RGBW dark--light
Return		

DMX Channel Summary		
Channel	Value	Function
CH1	0-255	Pan
CH2	0-255	Tilt
CH3	0-255	Pan & Tilt Speed
CH4	0-255	Total dimmer
CH5	0-255	Red
CH6	0-255	Green
CH7	0-255	Blue
CH8	0-255	White
CH9	0-255	Strobe
CH10	0-255	Zoom
CH11	0-254	Function
	255	Sound control
CH12	0-255	Function speed
CH13	0-255	Pan fine
CH14	0-255	Tilt fine
CH15	0-255	Reset
CH16	Empty	

SHEHDS