

USER'S MANUAL

LED Wall Wash 18x18W RGBWA+UV Lighting



Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

Statement


The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual. Please forgive that we will not be notice for technical change

Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over +&-10% while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minuter.
6. Please look round the manual for ensure the product can be used normally.

Display Control Instruction

Welcome to use our light. The light uses energy-saving LED, long Product life, shockproof, dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects, easy to operate, suitable for all types of entertainment decoration, architectural lighting industry.

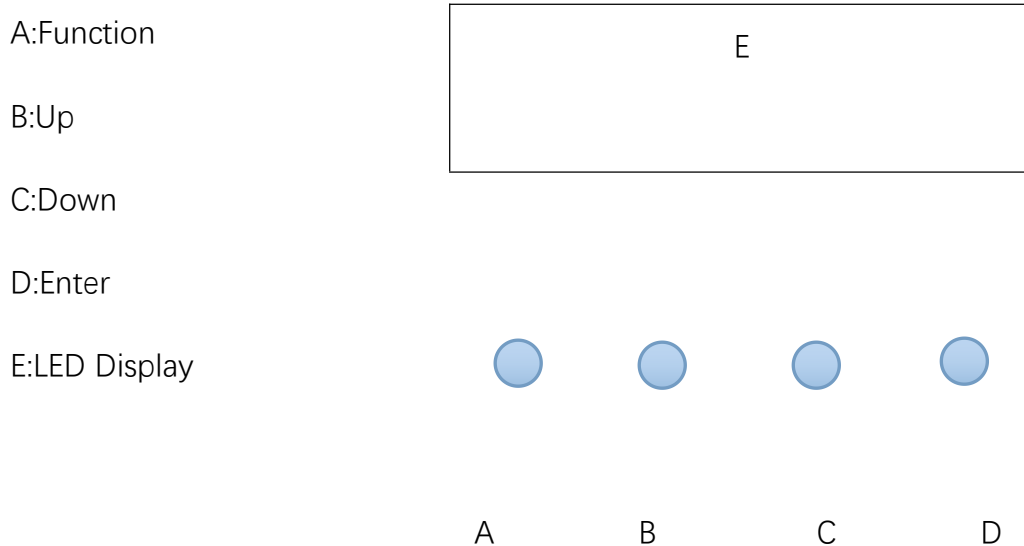

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

Product Introduction

- * Power Supply: AC90--275V, 50--60HZ
- * Power consumption: 324W
- * Fixing lamp: LED 18×18W RGBW
- * DMX-Control-channels: 11/29/108/119 DMX Channels
- * Shuttle: Flash rate: 0--10HZ
- * Dimmer: 0-100% mechanic dimmer
- * Long Lifespan LEDs (more than 60,000 hours)

DMX Channel Summary-11 Channels Mode

Channel	Value	Function
CH1	0-255	Total Dimmer
CH2	0-255	Total Strobe/Flash
CH3	26-35	White color
	36-55	Run horse mode1(Color control by CH5-10)
	56-65	Color select (Color control by CH5)
	66-75	Color Jump mode
	76-85	Color Gradual change mode
	86-245	Run horse mode
	246-255	Sound control
CH4	0-255	Run horse mode direction
CH5	0-255	Program Speed adjustment
CH6	0-255	Total Red Dimmer
CH7	0-255	Total Green Dimmer
CH8	0-255	Total Blue Dimmer
CH9	0-255	Total White Dimmer
CH10	0-255	Total Amber Dimmer
CH11	0-255	Total Violet Dimmer

DMX Channel Summary-29 Channels Mode

Channel	Value	Function
CH1	0-255	Total Dimmer
CH2	0-255	Total Strobe/Flash
CH3	26-35	White color
	36-55	Run horse mode1(Color control by CH5-10)
	56-65	Color select (Color control by CH5)
	66-75	Color Jump mode
	76-85	Color Gradual change mode
	86-245	Run horse mode
	246-255	Sound control
CH4	0-255	Run horse mode direction
CH5	0-255	Program Speed adjustment
CH6	0-255	Total Red Dimmer
CH7	0-255	Total Green Dimmer
CH8	0-255	Total Blue Dimmer
CH9	0-255	Total White Dimmer
CH10	0-255	Total Amber Dimmer
CH11	0-255	Total Violet Dimmer
CH12-29	0-255	1-18# LED color select

DMX Channel Summary-108 Channels Mode

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
R	1	7	13	19	25	31	37	43	49	55	61	67	73	79	85	91	97	103
G	2	8	14	20	26	32	38	44	50	56	62	68	74	80	86	92	98	104
B	3	9	15	21	27	33	39	45	51	57	63	69	75	81	87	93	99	105
W	4	10	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106
A	5	11	17	23	29	35	41	47	53	59	65	71	77	83	89	95	101	107
UV	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108

DMX Channel Summary-119 Channels Mode

Channel	Value	Function
CH12	0-255	Total Dimmer
CH13	0-255	Total Strobe/Flash
CH14	26-35	White color
	36-55	run horse mode1(Color control by CH5-10)
	56-65	Color select (Color control by CH5)
	66-75	Color Jump mode
	76-85	Color Gradual change mode
	86-245	Run horse mode
	246-255	Sound control
CH15	0-255	Run horse mode direction
CH16	0-255	Program Speed adjustment
CH17	0-255	Total Red Dimmer
CH18	0-255	Total Green Dimmer
CH19	0-255	Total Blue Dimmer
CH20	0-255	Total White Dimmer
CH21	0-255	Total Amber Dimmer
CH22	0-255	Total Violet Dimmer
CH12-119	0-255	Point control

119CH mode LED point control channel

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
R	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114
G	13	19	25	31	37	43	49	55	61	67	73	79	85	91	97	103	109	115
B	14	20	26	32	38	44	50	56	62	68	74	80	86	92	98	104	110	116
W	15	21	27	33	39	45	51	57	63	69	75	81	87	93	99	105	111	117
A	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	112	118
UV	17	23	29	35	41	47	53	59	65	71	77	83	89	95	101	107	113	119

Display Control Instruction

No	Function
<i>R00 1-255</i>	DMX Address
<i>ch 11-29- 108</i>	11/28/108/119 channel DMX Address
<i>cc00-99</i>	Color jump mode
<i>E000-99</i>	Gradual change mode
<i>E100-99</i>	Run horse mode
<i>P000-99</i>	Run horse mode
<i>t100-99</i>	Run horse mode
<i>P000-99</i>	Run horse mode
<i>t100-99</i>	Run horse mode
<i>tU00-99</i>	Run horse mode
<i>bE00-99</i>	Sound mode
<i>r00 1-255</i>	Red Color 0-255
<i>G00 1-255</i>	Green Color 0-255
<i>b00 1-255</i>	Blue Color 0-255
<i>o00 1-255</i>	White Color 0-255
<i>y00 1-255</i>	Amber Color 0-255
<i>P00 1-255</i>	Violet Color 0-255
<i>1d0 1- 14</i>	ID