Contents

1. Usage envi	ironment	1
2. Installation	n Precautions	1
3. Recommen	nded steps	2
4. Menu		2
5. User		2
5.1 Enro	əll	3
5.2 User	· View	4
5.3 Dept	t	4
5.4 Dow	nload enrollmsg	5
5.5 Up.E	Data	5
6. Shift		5
6.1 Atter	n rule	6
6.2 Shift	t	6
6.3 Bell.		
6.4 Log	Info	8
7. Report		9
8. System		10
8.1 Devi	ce Setup	10
8.2 Adva	anced setup	11
9. Access	-	11
9.1 Acce	·SS	12
9.2 Time	ezone settings	12
9.2.	1 Day timezone	12
9.2.	2 Week timezone	13
9.2.	3 Normal open timezone	13
9.3 Oper	n Group	13
10. Data Mgt	t	14
11. Commun	ication	15
11.1 Cor	nm set	15
11.2 Ser	ver	16
11.3 Eth	ernet	17
12. System In	nformation	17
Appendix1	Schematic Diagram of Access Control Wiring	
Appendix2	Input Method Introduction	19

Thank you for using our products, which adopt the latest biometrics solution and high speed stable ARM processor. The product's recognition, speed and other performance indicators are in the industry leading level, fully meet your efficient work requirements.

- Due to the continuous update of the product, all performance and parameters are subject to the actual product, any change without prior notice. The actual product may be inconsistent with the information, and shall not be liable for any discrepancy between the actual technical parameters and the information.
- The picture description in this document may not match the picture of the product in your hand, please refer to the actual product.

1. Usage environment

- 1) Avoid installing device in a place where strong light is shining. Strong light has influence on face recognition, which may lead to the failure of face recognition verification.
- 2) The operating temperature of the device is 0°C-45°C.Avoid long-term outdoor use. Long-term outdoor use will affect the normal operation of device. If it is must be used outdoors, It is recommended to use sunshade and heat dissipation equipment in summer and heat preservation equipment in winter.

2. Installation Precautions

Fix the rear panel on the wall \rightarrow Install the device on the rear panel \rightarrow tighten the screw on the bottom of the machine.

- 1) Before installation, please make sure that the power system of device is turned off during installation. Live installation and wiring operations can cause damage to the machine due to contact with the power cord.
- 2) On the situation that static electricity is a bit heavy, please connect ground wire first and then connect other wires, which can protect the device from damaging in static electricity.
- 3) If do not use some ports of terminals. Please do not expose the lines that connect the unused ports. It may cause short circuit damage to equipment. At the same time, please use different colored lines to connect ports for distinguishing different port.
- 4) Please connect other lines before connecting the power cord, and finally power test. If it is found that the device cannot work normally after power on, the power must be cut and check device and all the lines.
- 5) If the distance between the power supply and the device is far, it is strictly forbidden to use network cable or other special wire instead of power cord.
- 6) When wiring the attendance device, due to abnormal wiring, the device circuit, motherboard and fingerprint scanner are burnt out, which causes the device cannot be used normally, which is not within the scope of warranty.

3. Recommended steps

- 1) Step 1: Open the box to check the device and power on the device. Check for exceptions, set the date and time of the device, and install the device.
- 2) Step 2: Add users and register users' face, fingerprint, card, password, etc.
- 3) Step 3:Set shift.
- 4) Step 4:Set up shift schedule for users.
- 5) Step 5:Download attendance records at the end of month.

4. Menu

Touch the screen and a menu bar will pop up at the bottom of the screen, click to access into menu, when an admin is registered, After passing the verification of admin's face or card or password then the menu can be entered



- User : Enrol user, view user list, department setting, download enrolment data and upload enrolment data.
- Shift :records warning setting, grace minimum setting, logs information.
- **Report :** Download attendance reports in Excel format
- **System:** It includes general settings, like time, language settings, and firmware updating
- Access : Set Wiegand output format, lock delay , time zone setting and open group setting
- Data Mgt: Download records in txt format, delete data and initialize device
- Comm set : Set device No. , server setting, Ethernet setting
- Sys info : Query registration information and detailed information of device.

5. User

The basic information of the user on the device includes face, fingerprint, card, password and privilege. In attendance management, due to personnel changes. Therefore, the device provides add, delete, change the user and other operations.

Touch the screen and a menu bar will pop up at the bottom of the screen, click

> [User Mgt], It includes add user, user view, department setting, download enrolment data and upload enrolment data.

BACK	User Mgt
Add user	t/
User viev	v
Dept-ma	n
Downloa	d enrollmsg
	nrollmsg

5.1 Enroll

< BACK Add user	< ВАСК	_	
		Face	
ID 1 Name Dept.		E Contraction of the second se	
Add user		RFID Card	
		PWD	

- 1) ID: When registering, each user can only have one unique 'ID'.
- 2) Name: Input, edit name by T9 input method.
- 3) Face: Follow the on-screen prompt for face registration.

Note: Please stand directly in front of the device, face the camera, and keep the entire face displayed in the frame, In order to maintain a good face recognition effect. The following picture is for your reference

- 4) Fingerprint: Press finger three time to finish enrollment
- 5) Card: Select Reg.Card and put card on swipe area to register card
- 6) **Password:** An ID can only register one password. After clicking the password icon, enter the password to be set and then press ok to confirm the

password again.

Remark: Verify password by touching the screen then click then input ID-click 'OK'-input password-click 'OK'

5.2 User View

< BA	ACK	Fin	nd Fir	nd.Name	< BACK Chi	ng(1)		< BACK Ch	ing(1)
ID	Name	Face	FP C	ard PWD	Edit	Advanced setup		Edit	Advanced setup
1	Jessica	1	1	* 0	ID 1			Dept	0
2	Sophie	2	2	* 0				Shift	No 🖉
					Name Ching			T.Zone	No 🖉
					FP 2			Birthdaty	00/00 🖉
					Card 31061			Start:	2000-01-01 🖉
					PWD	Modify Face Delete		End:	2099-01-01 🖉
					Privilege User)		GRP	No 🖉
	Pre		Ne	ext					

Browse all registered persons in the device, click corresponding user to edit its information, including name, password, dept, privilege and access control settings; You can also change face registration information or delete this user, you can quickly locate the user you want to edit by **[**Find **]** or **[**Find Name **]** at the top of the page.

Note:For 【Admin】, User and Admin and Super.user can be selected

User:If there is Admin and Super.user in this device, user is not allow to access into menu Admin: The manager of this device. Only admin has permission to access into menu. Super.user : Only when there is Admin in device, then can register Super.user, and Super.user can only operate part of menu, such as register users

5.3 Dept.

Edit department name, up to 14 departments can be supported

< BACK Dept	-man

5.4 Download enrollmsg

Touch the screen and a menu bar will pop up at the bottom of the screen, click > [User Mgt] > [Download enrollmsg], insert U-disk in device to download, 3 files will be exported as below:

- 1. User data file (AFP_001.dat): It can be used to synchronized users between devices, and '001' represents device ID
- 2. User's enrolled photo(EnrollPhoto)
- 3. User information Excel sheet(Staff): Users can edit it in PC then upload back to device, please refer to below picture:

	A, Enroll number: or dmin :0 or not fille					quired					up to 48 wor	ds. D, Shift: O	*8.
ID	Name	Dept.	Shift	Admin	FP	Fac e	P₩D	Card	Lock timezo ne	GRP	Birthdat y	Start:	End:
1	Jessica		0	0	1	0	123	0	0	0			
2	Sophie		0	0	1	1	123	0	0	0			

Fill in personnel information according to the prompt of form header. As for "Shift" item, it is the editing shift number in the time attendance setting. When complete the editing. Directly Click [Save], and save the edited file into U-disk.

5.5 Up.Data

After editing shift form, Touch the screen and a menu bar will pop up at the bottom of the screen, click > [User Mgt], then insert U-disk, click [Upload enrollmsg] and transmit the edited user information to device.

Remark: For Lock Time zone, start time and end time, Pls refer to Chapter 9 Access

6. Shift

Touch the screen and a menu bar will pop up at the buttom of the screen, click > [Shift] > [Atten rule], It includes attendance rules, shift settings, record warning setting, and log information.

6.1 Atten rule

This chapter is used for setting shifts and attendance rules

Touch the screen and a menu bar will pop up at the bottom of the screen, click

Item	Meaning					
D	Check if users make punch repeatedly within this range, if records interval					
Re verify	is less than this value, records won't be stored					
L a a Warrin a	When rest available storage capacity is less than this value, device will					
Log Warning	alarm					
Sava Dhata	If select 'Yes', when device connect to software, captured photo when					
Save Photo	users verify face can be shown in software					
Strong oon also to	If select 'Yes', and enable 'save photo', when device connect to software,					
Stranger photo	captured photo when strangers verify face can be shown in software					
Default Shift	Set default shift, when you add users, they will apply this default shift					
Excel Pwd	Set password for attendance report					
T , ,'	When user's late arrival time exceeds *** mins, then it is counted as late					
Late time	arrival.					
I	When user's early leave time exceeds *** mins , then it is counted as early					
Lea time	leave.					

> 【Shift】 > 【Atten rules】

6.2 Shift

1) Edit shift (Single shift)

Touch the screen and a menu bar will pop up at the bottom of the screen,

BACK	Shift		< BACK Shift1
tten rules	Edit shift	Bell Log Info	0
Name Se	ec1 Sec	2 Sec3	
shift108:30	-12:00 13:00-1	7:00 18:00-21:00	Name shift1
shift2		2	Sec1 08:30 ~ 12:00
shift3		6	
shift4		2	Sec2 13:00 ~ 17:00
shift5			Sec3 18:00 ~ 21:00
		1	Cutofftime 00:00
shift6		6	
shift7		2	2
shift8		6	2

According to real work time to edit shift, section status can be set as sign(normal attendance) or overtime.

2) Edit Shift (Multiple shifts)

When there are multiple shifts, we recommend downloading shift sheet to edit shift, edit all shifts through the shift sheet and upload them back to the device to avoid tedious operations on the device. Specific operations are as follows:

1. 【Download Shift】: Touch the screen and a menu bar will pop up at the bottom

of the screen, click \bigcirc > [Shift] > [Atten rules] , then insert U-disk. Click [Download Shift], then you can download shift arrangement in excel form, Also you can edit the form on PC. Pls refer to below picture:

						Shift					
Note	: A, shift name:	up to 48 words. B	. Section type: 0: r	ormal	attendance.1: ove	ertime. C. cut off t day	ime: if t	he punch before t	he cut off time ,it	will ca	alculate as the previous
Sec1					Sec2		Sec3				
NO.	Name	IN	OUT	Sec_t ype	IN	OUT	Sec_typ e	IN	OUT	Sec_t ype	CutoffTime:
1	Day Shift	08:30	12:00	0	13:30	18:00	0	18:30	21:00	1	00:00
2	Night Shift	22:00	06:00	0							07:00
3	Half Day	08:00	12:00	0							00:00

Edit shift arrangement according to the prompts of form header. Maximum 8 shifts can be set. Click [Save] after editing and save the file into U-disk.

Note:

1) Attendance time must be in the format of time, and attendance type must be in the format of digits. So when you handle the setting, pls pay attention that the input method is in English half-angle status. Checking Method: For example, when you input 10:30, double click this cell, then software will automatically turn the digits into 10:30:00.

2) If you set the shift of cross time, then the Clock-in before the cross time will be counted as the record of previous day. And shift should start after the cross time. For example:

						Shift					
Note	: A, shift name:	up to 48 words. B	. Section type: 0: r	normal	attendance.1: ove		ime: if t	he punch before t	he cut off time ,it	will ca	alculate as the previous
						day					
			Sec1			Sec2			Sec3		
NO.	Name	IN	OUT	Sec_t ype	IN	OUT	Sec_typ e	IN	OUT	Sec_t ype	CutoffTime:
1	Shift1	23:00	08:00	0							09:00

Cross time is set at 09:00am. Then shift should start after 08:00, and Clock-in record before 09:00am on Tuesday should be counted as the record of Monday.

3) If you don't need to clock at noon, combine the two sections into one . For example: 08: 30-12: 00
13: 30-17: 50, it can be set to section 1: 08: 30-17: 50

4) Time Skip setting is not allowed. For example, When you complete the setting of Section 1, you cannot skip Section 2 and get to set Section 3.

2. 【Upload shift】: After editing, insert U-disk and click【Upload Shift】, then you can upload the edited shift arrangements into device.

6.3 Bell

Touch the screen and a menu bar will pop up at the bottom of the screen, click

Shift > (Bell), Up to 24 groups of scheduled ring time. Touch the bell time to enable it.

< BACK	Shift		
Atten rules	Edit shift	Bell	Log Info
Bell time			0
Bell count	5		00
Bell outpu	ıt		No 0

6.4 Log Info

Input the user ID and time range to query records of the corresponding user

< BACK			
Atten rules	Edit shift	Bell	Log Info
ID			
Start	2021/	01/0	01
End:	2021/	01/2	21
	Log Inf	ю	

7. Report

Touch the screen and a menu bar will pop up at the bottom of the screen,

click > [Report], Insert U-disk, and input the start and end time that you need to check. Click "OK" to download the report. The report includes original record sheet(Original Record), attendance list(Schedule)and summary sheet(Summary Report).

Original Record: You can check all users' attendance records in the sheet. Pls refer to below picture:

	Original record																													
Date	vate:2019-8-1~2019-8-31																													
ID:1	D:1 Name:Lucas Dept.:Office Shift:Day Shift																													
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:2
12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:03	12:0
13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:2
18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:04	18:0
► H	Original record schedule / Sunmary Report /																													

Schedule: Attendance machine can automatically analysis the clock-in and clock-out data, and transmit these data in EXCEL file to the U disk. Format as below: (Remark: Red text indicates that the attendance is abnormal, such as late, early leave. Blue means overtime)


	schedule												
ID:1	11 Name:Lucas												
Dept.:Offic	Dept.:Office Shift:Day Shift Date:2019-8-1^2019-8-31												
		Se	c1 Se		c2 Se		c3	Work hours				Leave	
Date	week	IN	OUT	IN	OUT	IN	OUT	Normal	Actual	OT hours	Late minutes	minutes	
8-1	тни	08:25	12:03	13:26	18:04			8	8	0	0	0	
► N 0:	M Original record schedule Summary Report / 2/												

Summary Report: It is a Statistics display of employee attendance for one month

	Summary Report											
Date:	2019-8-1~2019	9-8-31										
ID	Name	Name Dept.		Work hours		Late minutes		Leave minutes		OT hours		Truancy
			Normal	Actual	TIMES		Minutes	TIMES	Minutes	Normal	/Actual)	-
1	Lucas	Office	248.0	248					77.5		31.0/31.0	0
M Original record / schedule Summary Report												

8. System

Touch the screen and a menu bar will pop up at the bottom of the screen, click

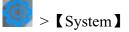

8.1 Device Setup

Item	Meaning
Time	Set device time
Time fmt	24H and 12H format can be selected
Date fmt	Select different date format
Language	Change device displayed language

Voice	Set the volume of speaker					
Play name voice	if play user name after verifying success					
Multiple face	If set it to yes, device can verify multiple users(up to 5) at the same time					
Result time	When the user's face is always displayed on the screen, how long does it take for the device to verify the face again, if set to 0s, device will only recognize once in the situation and it won't be recognized until face moves off screen and appears again					
Screen Idle	How long does it take to enter screen saver when the main Interface is not operating					
Screen Saver Wake up	When device displays screen saver, the user can choose to wake up the device when the device detects the face or touch screen					
bio-assay	Verify that the user is a live person instead of photo.					
Show Avatar	Whether to show user's photo or not on the screen after verifying successfully					

8.2 Advanced setup

Item	Meaning				
Max Admin		Set the maximum number of device admin			
Verify Mode	FA/C/P	No matter what kind of verification method can be verified			
	Others	Need to verify two verification methods together			
Visitor QRCode		her enable scanning QRcode function or not. Connect o our cloud software and generate QRCode then verify it in device			
1:N Identify	Set the threshold of face recognition				
Live threshold	When enable 'bio-assay', the threshold of face recognition				
FP per user	Maxim	am number of fingerprints that can be registered per user			
FP level		Set the threshold of fingerprint recognition			
	No	Device will not detect mask			
Wear mask	Yes	Users can wear a mask or not wear a mask to verify, if wear mask, the threshold of face recognition is same as 'mask threshold' settings			
	Must	Device will detect mask, if user doesn't wear mask,			

	device will not accept it				
Mask threshold	When wearing a mask, the threshold of face recognition				
Exposure When device is in dark light and backlight environment, c					
Compensation	change this value to adjust camera				
Testing	Check whether the camera is normal				
Camera calibration	Calibrate camera				
Firmware upgrade	Insert U-disk (FAT32 format) to do device firmware upgrade				

9. Access

Touch the screen and a menu bar will pop up at the bottom of the screen, click > [Access]

9.1 Access

Item	Meaning
OD delay	Set the time between lock relay effective and the state of resume normal.
Sensor Mode	Set the type of door sensor, the default setting is 'No'.
Sensor Delay	When door status is opposite to sensor mode and keep this status for more than sensor delay, device will alarm
Users	Set the number of user required to open the door. For example: set it to 2, only when 2 different users verify at the same time, the door can be opened
Anti pass	Anti pass function will be activated when it is set as in, out or two way
Wg output	Define the content of wiegand output, user ID and card number can be selected
Wg format	You can define wiegand port output format. The default format is 34bits, and it can be changed to 26bits
External Wg input	Connect external wiegand reader
Tamper alarm	Set if the device alarm when the tamper button in the back side is released

Inter lock	Set whether to open interlock function
Alarm proc	It is used for responding to external detection equipment to output an alarm signal
Fail count	It is to set how many times the verification failure occurs, the device will alarm, if set it to 0, it means disable this function

9.2 Timezone settings

9.2.1 Day timezone

According to the rules and regulations of user's entry and exit, set the daily access time to the corresponding time period. You can totally set 8 groups of day time zones, or week time zones. For example, you can set the time between 6:00am and 8:00am to open the door, and the time between 17:00pm and 19:00pm to open the door. Pls refer to below picture Day Timezone 1 setting. If you want to set the door to be open in all day, pls refer to below picture Day Timezone 2 setting.

Example: [Day Timezone 1] setting as below

T.Zone1	06:00	08:00
T.Zone2	17:00	19:00
T.Zone3	00:00	00:00
T.Zone4	00:00	00:00
T.Zone5	00:00	00:00

Example: [Day Timezone 1] setting as below

T.Zone1	00:00	23:59
T.Zone2	00:00	00:00
T.Zone3	00:00	00:00
T.Zone4	00:00	00:00
T.Zone5	00:00	00:00

9.2.2 Week timezone

According to the rules and regulations of user's entry and exit, Set the passage time of each week to the corresponding day time zone. For example, the above-mentioned daily time zone rule(only 6:00am to 8:00am can open the door, and only 17:00pm to 19:00pm can open the door) applies from Monday to Friday, and door can be opened all day on Saturday and Sunday. Pls refer to (Figure 1) for Week Timezone 1:

Week 7	imezone	Normal O	pen Time	
SUN	2	SUN	1	
MON	1	MON	1	
TUE	1	TUE	1	
WED	1	WED	1	
THU	1	THU	1	
FRI	1	FRI	1	
SAT	2	SAT	1	
(Fig	ure 1)	 (Figure 2)		

Remark: In our device, **[**Week Timezone 0 **]** is default to open the door all day. All other time zones are customizable

9.2.3 Normal open timezone

According to requirements, Set the passage time of each week to the corresponding day time zone .Example: If the setting is as (Figure 2), Day time 1 applies to every day, then it means the door is kept open between 6:00 am and 8:00 am and 17:00pm to 19:00pm everyday

9.3 Open Group

Example: Set open group1 to 12, it means in the definition of user access control in the above section, it is defined that one from group 1 and another one from group 2 together to verify that can open the door

Example 1: Single one can open the door

```
Open group 11Open group 20...0Open group 50
```

In the above Settings, which means that only users belonging to group 1 have access to the door.

Example 2: Multiple users who from the same group must together to verify that can open the door

```
Open group 1111Open group 20...0Open group 50
```

In the above Settings, which means that need 3 users belonging to group 1 must together to verify that have access to the door.

Example 3: Different users from different groups

```
Open group 112Open group 20...0Open group 50
```

In the above Settings, which means that need 2 users that one belonging to group 1 and another one belonging to group 2 must together to verify that have access to the door.

Users belonging to group 1 and users belonging to group 2 do not have the right to open the door independently.

10. Data Mgt

Touch the screen and a menu bar will pop up at the bottom of the screen, click

> [Data Mgt], Data management consists of 6 modules: Download Glog, Download All Glog, Clear All Enroll, Delete All Glog, Initialize Menu, Clean Manager.

【Down Glog】:New attendance logs saved in device can be downloaded to U-disk, and form a TXT file, eg:'GLG_001.TXT'

【Down All Glog】:All attendance logs saved in device can be downloaded to U-disk, and form a TXT file, eg:'AGL 001.TXT'

[Clear All Enroll]:Delete all registration info of all users(include face, fingerprint, card and pwd)[Delete All Glog]: Delete all logs of all users

[Initialize Menu]: Reset device parameter settings, it won't affect user data and records

[Clean Manager]: Clear all manager privileges on the device

11. Communication

Touch the screen and a menu bar will pop up at the bottom of the screen, click



11.1 Comm set

< BACK Comm se	et
Comm set	
Server	
Ethernet	

Item	Meaning
Device ID	Set corresponding device No., the default device No. is 1, Please note that
	the number is related to the communication
Port No.	The default port No. is 5005, For communication connection under LAN
Baud rate	The default value is 9600

11.2 Server


< BACK	Server
Server Req	No d
Use domain	Nm No 🖉
DomainNm	192.168.0.110 0
Server IP	192.168.000.122 0
SerPortNo	7788 /
Heart beat	30
Server appro	ival No d

When using WAN connection, please do corresponding server settings

Item	Meaning
Server Req	Select 'Yes' or 'No', select 'yes' to enable server communication
Use domainNm	Select 'Yes' or 'No'
DomainNm	If you select 'Yes' for 'Use domain Nm', enter the server domain name here
Server IP	If you select 'No' for 'Use domain Nm', enter the server ip address here
SerPortNo	Enter server port number
Heartbeat	Default value is 3s
Server approval	If set it to yes, only when device connect to server can users make punch in device

11.3 Ethernet

Use Ethernet to connect the device to computer. An example is shown in the figure below:

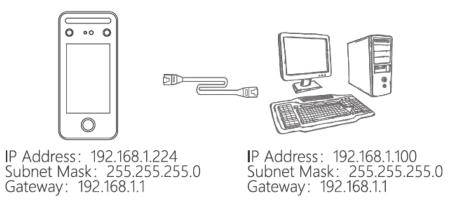

12. System Information

Touch the screen and a menu bar will pop up at the bottom of the screen, click

Sys info], query registration information and detailed information of device.

< BACK Sys i	nfo		< BACK	Sys info
Capacity	In	fo	Capaci	ty Info
Manager	0	10	Company	
Add user	7	5000	Web Site	
Face	6	5000	No	ZX0006828566
FP	1	10000	Released	19 Jan 2021
Card	119	5000	Model	fp50v
PWD	450	5000	Firmware	ai806_fp50v_v2.00
G_Log	119	500000	Engine	AiFace_v3.10
All log quantity	450	500000		

Appendix1 Schematic Diagram of Access Control Wiring

1) Schematic diagram of device wiring port


+12V	+12V
GND	GND
Lock_COM	The common end of the control lock signal
Lock_NC	Normal closed end of the control lock signal
Lock_NO	Normal opened end of the control lock signal
Button	Open signal
D-Sensor	Door sensor
Bell+	Door bell +
Bell-	Door bell -

+12V	+12V
GND	GND
+12V	+12V
GND	GND
WG_IN0	WG input 0
WG_IN1	WG input 1
WG_OUT0	WG output 0
WG_OUT1	WG output 0
ALARM-	Alarm-
FIRE	Fire in

+12V	+12V
RS485A	RS485A
RS485B	RS485B
GND	GND

TCP/IP	TCP/IP interface
--------	------------------

2) Device connection diagram

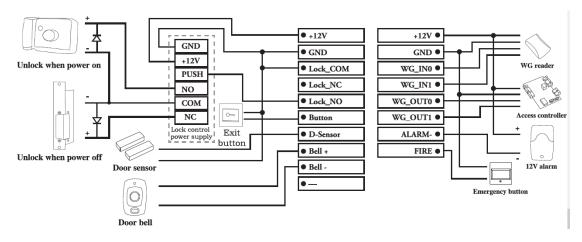

3) RS485 connection

12V•	 •12V
RS485A •	•RS485A
R\$485B •	•RS485B
GND •	•GND

Master machine

Slave machine

Appendix2 Input Method Introduction

< BACK	Name	
a		
	abc	def
ghi	jkl	mno
pqrs	tuv	wxyz
		Delete
	Ok	
Alt	-	Esc

Touch 'Alt' to switch capital/small letter or number, after finished,touch 'Ok' to save it **How to input punctuation:** when the input method is in capital/small letter state,touch '**—**' to select what you want to input. The first one is space, the second is dot and so on