

USER'S MANUAL

LED Super Beam 4x25W DCBWL Moving Head



-Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

-Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change

-Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.

2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over $\pm 10\%$ while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minuter.
6. Please look round the manual for ensure the product can be used normally.

-Display Control Instruction

Welcome to use our light. The light uses energy-saving LED, long Product life, shockproof, dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects, easy to operate, suitable for all types of entertainment decoration, architectural lighting industry.

Access control panel functions using the four buttons located directly underneath the LED display on the included wired remote.

BUTTON	FUNCTION
<MENU>	Used to scroll through the current operating mode, as well as back out of the current menu option
<DOWN>	Used to select decreasing advancement in the value
<UP>	Used to select increasing advancement in the value
<ENTER>	Used to select a value and store it to memory



The Control Panel shows the current state of the unit. It is used to select the operating mode, as well as the sub-features. For a detailed layout of the control panel functions, please see the "menu map" section on the following page.

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

-Product Introduction

- * Power Supply:AC90--275V,50--60HZ
- * Power consumption:100W
- * Fixing lamp:LED 100W
- * DMX-Control-channels:16/14 DMX Channels
- * Shuttle:Flash rate:0--10HZ
- * Dimmer:0-100% mechanic dimmer
- * Long Lifespan LEDs(more than 60,000 hours)

-DMX Channel Summary-16 Channels Mode

Channel	Function	Value	Function
CH1	X axis	0-255	Pan X axis
CH2	X axis	0-255	Pan X axis Fine tuning
CH3	Y axis	0-255	Tilt Y axis
CH4	Y axis	0-255	Tilt Y axis Fine tuning
CH5	Pan and Tilt		Pan and Tilt Speed adjustment
CH6	Dimming	0-255	Total dimming
CH7	Strobe	0-255	Strobe
CH8	Light 1	0-255	Light 1 dimming
CH9	Light 2	0-255	Light 2 dimming
CH10	Light 3	0-255	Light 3 dimming
CH11	Light 4	0-255	Light 4 dimming
CH12	Color	001-127 128-191	Color selection Color wheel rotation (Clockwise Slow to Fast) Color wheel rotation (Anti-clockwise Slow to Fast)

		192-255	
CH13	lens	041-127 128-127 128-255	lens tuning Lens (Clockwise Slow to Fast) Lens (Anti-clockwise Slow to Fast)
CH14	Auto	016-044 045-074 075-104 105-128 129-157 158-255	Auto run mode 1 Auto run mode 2 Auto run mode 3 Auto run mode 4 Sound control mode Sound control mode
CH15	sensitivity	0-255	Voice sensitivity adjustment
CH16	Reset	250-255	Reset

-DMX Channel Summary-14 Channels Mode

Channel	Function	Value	Function
CH1	X axis	0-255	Pan X axis
CH2	X axis	0-255	Pan X axis Fine tuning
CH3	Y axis	0-255	Tilt Y axis
CH4	Y axis	0-255	Tilt Y axis Fine tuning
CH5	Pan and Tilt	0-255	Pan and Tilt Speed adjustment
CH6	Dimming	0-255	Total dimming
CH7	Strobe	0-255	Strobe

CH8	Light 1	0-255	Light 1 dimming
CH9	Light 2	0-255	Light 2 dimming
CH10	Light 3	0-255	Light 3 dimming
CH11	Light 4	0-255	Light 4 dimming
CH12	Color	001-127 128-191 192-255	Color selection Color wheel rotation (Clockwise Slow to Fast) Color wheel rotation (Anti-clockwise Slow to Fast)
CH13	lens	041-127 128-127 128-255	lens tuning Lens (Clockwise Slow to Fast) Lens (Anti-clockwise Slow to Fast)
CH14	Reset	250-255	Reset

-Display Control Instruction

Display		Function
DMXSet Address	001-512	Channel address code
Channel Set	14/16	16/14 Channel control mode
Mode Set	Slve 1 Slve2 Auto Sound	Set Part activity
Show Mode	Show0-3	Select light control mode
Sound Sense	000-100	Voice sensitivity
NoDMX Set	Blac Auto Sound	Run this action when there is no DMX signal acce

	Hole	
Pan Inverse	On/Off	<i>Set PAN original position.</i>
Tilt Inverse	On/Off	<i>Set TILT original position.</i>
Fixture Reset	Yes/No	<i>Reset system value</i>

SHEHDS