

USER'S MANUAL

LED Wall Wash 24x9W RGBW Lighting



-Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

-Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change

-Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over $\pm 10\%$ while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minuter.
6. Please look round the manual for ensure the product can be used normally.

-Display Control Instruction

Welcome to use our light. The light uses energy-saving LED, long Product life, shockproof, dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects, easy to operate, suitable for all types of entertainment decoration, architectural lighting industry.

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

-Product Introduction

- * **Power Supply : AC90--275V,50--60HZ**
- * **Power consumption : 216W**
- * **Fixing lamp : 3W *24pcs With 3in1 LED lamp**
- * **DMX-Control-channels : 3-7-24-28 DMX Channels**
- * **Shuttle:Flash rate : 0--100HZ**
- * **Dimmer : 0-100% mechanic dimmer**
- * **Long Lifespan LEDs(more than 60,000 hours)**

Access control panel functions using the four buttons located directly underneath the LED display on the included wired remote.

BUTTON	FUNCTION
<MENU>	Used to scroll through the current operating mode, as well as back out of the current menu option
<DOWN>	Used to select decreasing advancement in the value
<UP>	Used to select increasing advancement in the value
<ENTER>	Used to select a value and store it to memory



The Control Panel shows the current state of the unit. It is used to select the operating mode, as well as the sub-features. For a detailed layout of the control panel functions, please see the "menu map" section on the following page.

-Display Control Instruction

Menu	Submenu	Translate	Function
ADD 1	ADD 1-AS 12	DMX Address	Channel address code 001-512
CH04	03.07.24.28	Channel	03/07/24/28CH
CC50	00-99	Jump	Color jump
CP50	00-99	gradient	Color gradient
DE50	00-99	Pulse	Color pulse
BE50	00-99	Sound	Sound control mode
EUD 1	0 1-09	Effect	Color Effect mode
SP50	00-99	Speed	Color Effect mode speed
r255	00 1-255	Red	Red dimming
G255	00 1-255	Green	Green dimming
b255	00 1-255	Blue	Blue dimming
F000	00 1-255	Flash/Strobe	Strobe

SHEHDS

DMX Channel Summary-3 CH			
Channel	Function	Value	Function
CH1	Red	0-255	Red Dimming
CH2	Green	0-255	Green Dimming
CH3	Blue	0-255	Blue Dimming

DMX Channel Summary-7 CH			
Channel	Function	Value	Function
CH1	Dimming	0-255	Total Dimming
CH2	Strobe	0-255	Strobe RGB
CH3	Function	0-255	Auto mode and sound mode (See the end of the page for details)
CH4	Speed	0-255	Function Speed Up&Down
CH5	Red	0-255	Red Dimming
CH6	Green	0-255	Green Dimming
CH7	Blue	0-255	Blue Dimming

DMX Channel Summary-24 CH			
Channel	Function	Value	Function
CH1	1-2-3#	0-255	Red Dimming
CH2		0-255	Green Dimming
CH3		0-255	Blue Dimming
CH4	3-4-5#	0-255	Red Dimming
CH5		0-255	Green Dimming
CH6		0-255	Blue Dimming
CH7	6-7-8#	0-255	Red Dimming
CH8		0-255	Green Dimming
CH9		0-255	Blue Dimming
CH10	9-10-11#	0-255	Red Dimming
CH11		0-255	Green Dimming
CH12		0-255	Blue Dimming
CH13	12-13-14#	0-255	Red Dimming
CH14		0-255	Green Dimming
CH15		0-255	Blue Dimming
CH16	15-16-17#	0-255	Red Dimming
CH17		0-255	Green Dimming
CH18		0-255	Blue Dimming
CH19	18-19-20#	0-255	Red Dimming
CH20		0-255	Green Dimming
CH21		0-255	Blue Dimming
CH22	21-22-23#	0-255	Red Dimming
CH23		0-255	Green Dimming
CH24		0-255	Blue Dimming

DMX Channel Summary-28 CH			
Channel	Function	Value	Function
CH1	Dimming	0-255	Total Dimming
CH2	Strobe	0-255	Strobe RGB
CH3	Function	0-255	Auto mode and sound mode (See the end of the page for details)
CH4	Speed	0-255	Function Speed Up&Down
CH5	1-2-3#	0-255	Red Dimming
CH6		0-255	Green Dimming
CH7		0-255	Blue Dimming
CH8	3-4-5#	0-255	Red Dimming
CH9		0-255	Green Dimming
CH10		0-255	Blue Dimming
CH11	6-7-8#	0-255	Red Dimming
CH12		0-255	Green Dimming
CH13		0-255	Blue Dimming
CH14	9-10-11#	0-255	Red Dimming
CH15		0-255	Green Dimming
CH16		0-255	Blue Dimming
CH17	12-13-14#	0-255	Red Dimming
CH18		0-255	Green Dimming
CH19		0-255	Blue Dimming
CH20	15-16-17#	0-255	Red Dimming
CH21		0-255	Green Dimming
CH22		0-255	Blue Dimming
CH23	18-19-20#	0-255	Red Dimming
CH24		0-255	Green Dimming
CH25		0-255	Blue Dimming
CH26	21-22-23#	0-255	Red Dimming
CH27		0-255	Green Dimming
CH28		0-255	Blue Dimming
Value	Function detail		
11-30	Color jump		
31-50	Color gradient		
51-70	Color pulse		
71-90	Flowing water		
91-110	Back and forth Flowing water 1		
111-130	Back and forth Flowing water 2		
131-150	Flowing water and strobe		
151-170	Color Pile up		
171-190	Surge 1		
191-210	Surge 2		
211-230	Surge 3		
231-250	Rainbow		
251-255	Sound control mode		