

USER'S MANUAL

LED Spot 30W Lighting with Light strip



-Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

-Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change

-Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over $\pm 10\%$ while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minuter.
6. Please look round the manual for ensure the product can be used normally.


-Display Control Instruction

Display		translate	Function
<i>A. 001</i>		DMX	Channel address code
<i>A. ddr</i>		Address	DMX address
<i>c. hnd</i>	<i>10ch</i> <i>12ch</i>	Channel	9/11 Channel control mode
<i>S. Lnd</i>	<i>SL 1</i> <i>SL 2</i> <i>AUTO</i>	Master Slave Auto	Select light control mode
<i>S. hnd</i>	<i>S. h 0</i> <i>S. h 1</i> <i>S. h 2</i> <i>S. h 3</i>	Sound mode	Sound mode selection
<i>Soud</i>	<i>on</i> <i>off</i>		
<i>SEnS</i>	<i>100</i>	sensitivity	Voice sensitivity
<i>bLnd</i>	<i>bLAc</i> <i>AUTO</i> <i>SoUn</i> <i>hold</i>		No 512 signal return to zero No 512 signal self-propelled No 512 signal sound No 512 signal keeps last console state
<i>L. Ed</i>	<i>off</i> <i>on</i>	LED	Display Backlight on/off
<i>d. 1SP</i>	<i>off</i> <i>on</i>	Display	Display Upside down 180 degree
<i>r. PAN</i>	<i>no</i> <i>YES</i>	Pan	Set PAN original position.
<i>r. t IL</i>	<i>no</i> <i>YES</i>	Tilt-1	Set TILT-1 original position.
<i>rESE</i>	<i>no</i> <i>YES</i>	reset	Reset system value

-Display Control Instruction

Access control panel functions using the four buttons located directly underneath the LED display on the included wired remote.

BUTTON	FUNCTION
<MENU>	Used to scroll through the current operating mode, as well as back out of the current menu option
<DOWN>	Used to select decreasing advancement in the value
<UP>	Used to select increasing advancement in the value
<ENTER>	Used to select a value and store it to memory

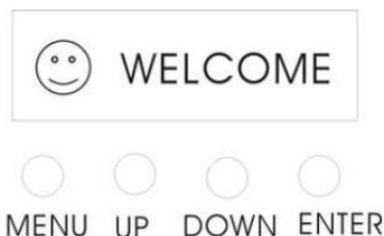

The Control Panel shows the current state of the unit. It is used to select the operating mode, as well as the sub-features. For a detailed layout of the control panel functions, please see the "menu map" section on the following page.

DMX Channel Summary-12 Channels Mode (r)

Channel	Function	Value	Function
1.	X axis	0-255	X axis
2.	X axis	0-255	X axis Fine tuning
3.	Y axis	0-255	Y axis
4.	Y axis	0-255	Y axis Fine tuning
5.	Color	009-79 80-139 140-255	Color selection Color mix selection Color cycling display
6.	Gobo	000-071 072-127 128-255	Gobo selection Gobo Shake and selection Gobo cycling display
7.	Strobe	0-255	Strobe
8.	Dimming	0-255	Total dimming
9.	Speed	0-255	PAN TILT Speed of rotation
10.	Auto	60-84 85-109 110-134 135-159 160-184 185-209 210-234 235-255	Automatic mode3 Automatic mode2 Automatic mode1 Automatic mode0 Voice-control mode3 Voice-control mode2 Voice-control mode1 Voice-control mode0
11.	Reset	21-100 101-200 201-249 250-255	X axis final motion Y axis final motion XY axis final motion Reset(5 seconds)
12.	Light strips	5-109 110-255	Color selection Color auto operation

-DMX Channel Summary-10 Channels Mode

Channel	Function	Value	Function
CH1	X axis	0-255	PAN X axis
CH2	Y axis	0-255	TILT Y axis
CH3	Color	009-79 80-139 140-255	Color selection Color mix selection Color cycling display
CH4	Gobo	007-071 072-127 128-255	Gobo selection Gobo Shake and selection Gobo cycling display
CH5	Strobe	0-255	Strobe
CH6	Dimming	0-255	Total dimming
CH7	Speed	0-255	PAN TILT Speed of rotation
CH8	Auto	60-84 85-109 110-134 135-159 160-184 185-209 210-234 235-255	Automatic mode3 Automatic mode2 Automatic mode1 Automatic mode0 Voice-control mode3 Voice-control mode2 Voice-control mode1 Voice-control mode0
CH9	Reset	21-100 101-200 201-249 250-255	X axis final motion Y axis final motion XY axis final motion Reset(5 seconds)
CH10	Light strips	5-109 110-255	Color selection Color auto operation

-Product Introduction

Voltage: AC100-275V, 50-60HZ

Power: 30W

Light source: One 30W white lamp bead, 12 RGB 0.2W lamp beads

Gobo : 1white+7gobos

Color: 1white+7colors

Channel: 9/11CH

Control mode: sound activated, master-slave, auto operation, DMX

X axis: 540°

Y axis: 270° **Manual focusing**