




Stage Lighting Equipment Supplier Expert

WELCOME TO JOIN US

USER'S MANUAL

7R BEAM MOVE HEAD LIGHT

USER MANUAL

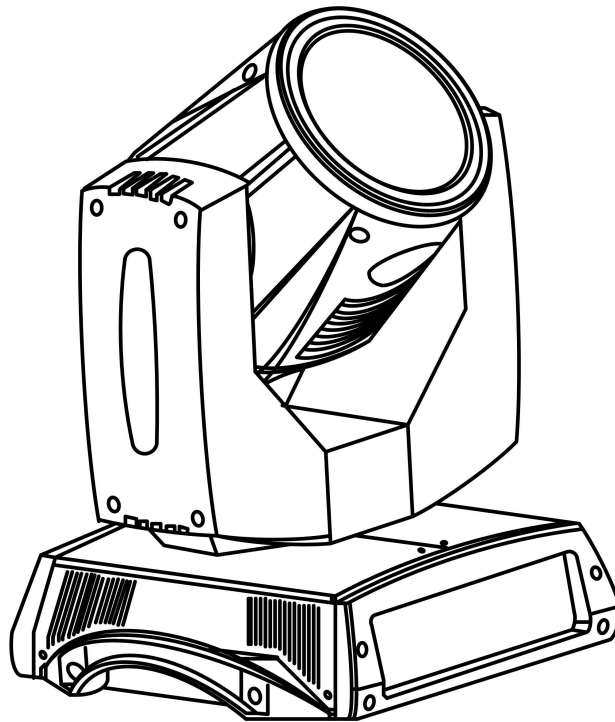

Chapter 1 InstallationProduct Instruction

7Power Input: 100-275V, 50/60Hz	Color temperature: 8000K)
Channel mode:20 DMX512 Channel	Pan scan: 540°(16bit) Electric correction
Tilt scan: 270° (16bit) Electric correction	Amazing dot matix, four tact switch, 180° turning show
Color wheel: one color wheel, 14 kinds of color chips in one color wheel	Lens optical system achanical fouce .beam angle 0 ~ 4° Over heat protection
Gobo: 17 gobos	strobe macro control available.
Lens optical system achanical fouce .beam angle 0 ~ 4° Over heat protection	lamp: Philips MSD Platinum 5R or YODN 5R (life:2200 hours
Power Dissipation: 350W	IP level :IP20
Magnetic ballast and AC/Dc power supply	Product Size: 523×337×511mm
Packing Size: 635X440X725	Net weight: 15.7KG

Cable connection (DMX)

IMPORTANT: The wires must not make contact with each other or with the metal casing of the connectors. The casing itself must be connected to the shield braid and to pin 1 of the connectors.

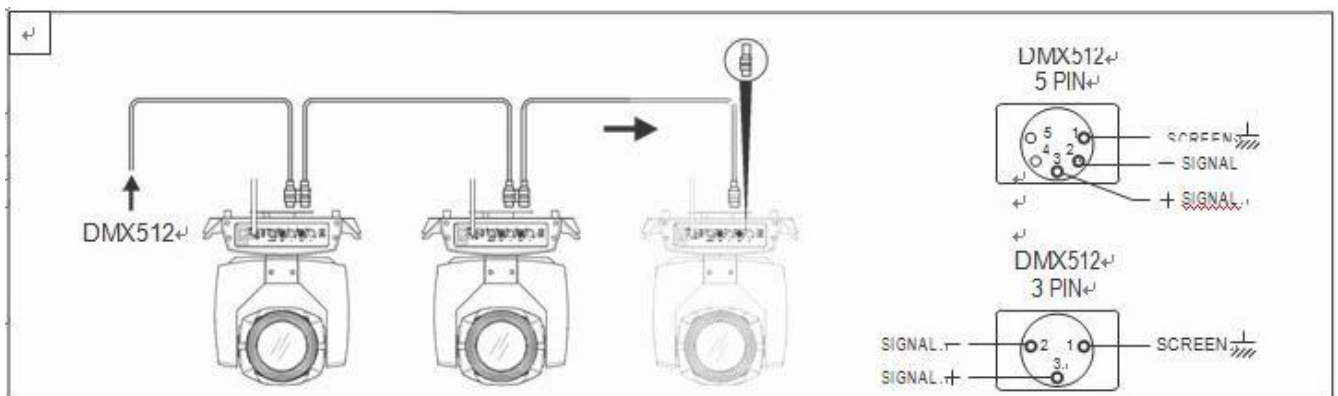


Figure 1 DMX Cable connection

Chapter 2 Panel operation

1. Brief

The light panel diagram show as Figure 3, Left area is TFT Displayer, support touch, and right area is encoder button, both of touch and coder button can operate light and setting.

Display & operation just like 'Android operation system', touch the item will set or modify setting.

Note: Prevent damage the touch or TFT displayer, Can not use sharp objects chick displayer.

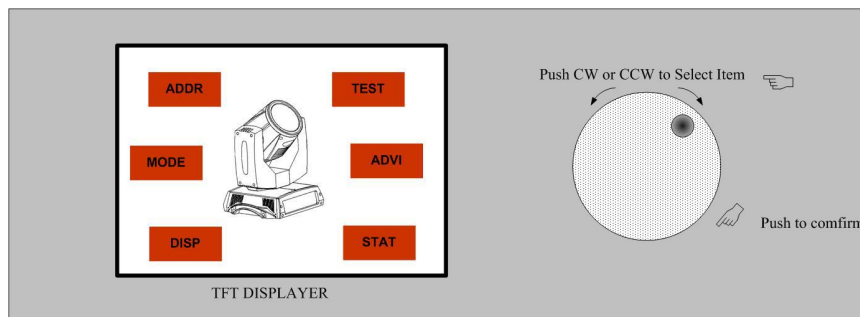


Figure 3 Panel diagram

2. Operation

Operate light with touch or encoder button

The left area is TFT Displayer and touch, chick item or value with finger will to complete operation of set light setting(parameters) or view light state.

The area on the right hand side is rotary encoder with button, As auxiliary input interface, if disable touch function,, the encoder can been choose to set or view the item, and then press the encoder button to confirm the selection, rotary encoder again set the parameter value, finally, Press encoder button one again to save value or setting.

3. Parameter value setting

When the selected item is value need to been modified, the dialog shown in Figure 4 will popup.

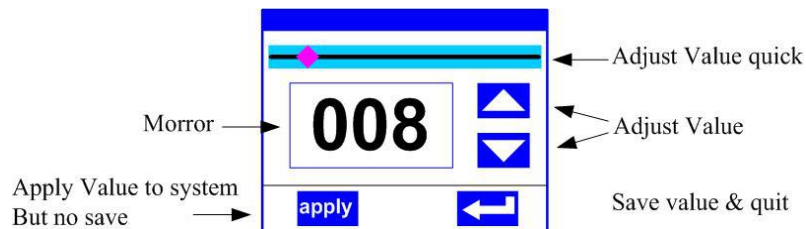


Figure 4 Dialog of value setting


Modify value: Can quickly modify value via pull the slider to the desired position, or click the button of 'up' or 'down' whit finger on the right side to set the exact desired value, another way is roll encoder on the right hand side of panel.

Apply value: When Value had been modified, Then press the bottom of 'apply' in the left corner to apply to the light, but hav't saved;

Save Value: Any time, click on the lower right corner of the "OK" button, the setting will been saved into internal memory.

4. Boolean parameter setting

- when the selected parameters is a Boolean value (such as ON or OFF), can directly modify setting by chick corresponding item, the setting will been saved right now.
- When the parameter is a key item, chick corresponding item, a dialog shown in Figure 5 will been popup ask for the confirm. Chick 'sure' to confirm.

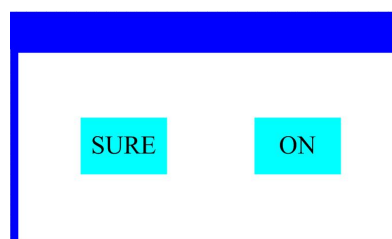

5. Sub Menu (Parameter)

- Click item of main menu, enter corresponding sub menu, shown in Figure 6, total 6 sub menu, includes class of parameter and status:
- ADDRESS: Set light DMX address.
- WORKMOD: Set light work mode, master or slave mode when in auto run mode.
- DISPLAY: Set display parameter, eg. select language.
- TEST: Used for test light, modify DMX channel data to test function, the corresponding function of reference channel function table.
- ADVANCE: Set light running parameter.
- STATUS: view light current status.

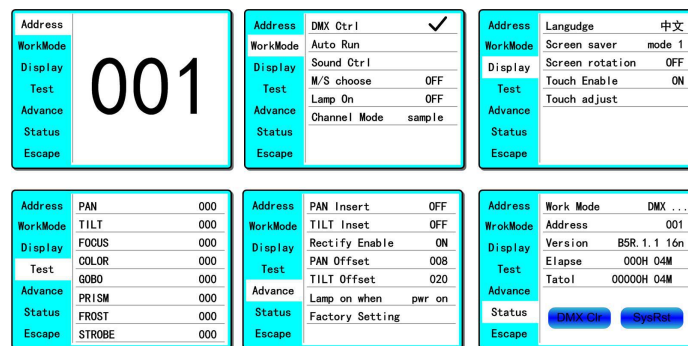


Figure 6 Parameter menu

6. Operation and parameter instruction

Via following operation, enter sub menu(parameter menu) shown in Figure 6

- In main menu, click 1/6 function button into corresponding parameter menu.
- In sub menu(page), click main item on the left side of display, can shift to corresponding sub menu(page) quickly.

7. Set DMX Address

Click and select the "ADDR", can enter the page of DMX address setting, range from 1 to 512, the address code shouldn't is not greater than (512- channels quantity), otherwise the light will not been controlled. Following is the operation:

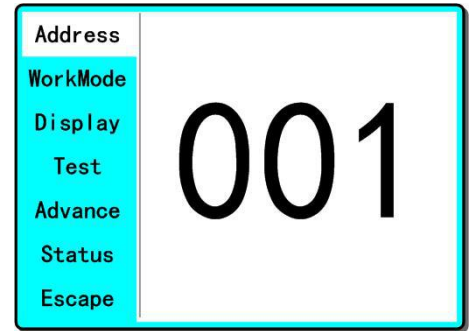


Figure 7 page of DMX Address

Enter the page of DMX address, as shown in Figure 7, click the blank area in right side of display will pop-up diglog as in Fig. 4. modify value, then click 'ENTER' to confirm and save DMX address code.

8. Set Light work mode

Enter the page of 'WORK MOD' as shown in Figure 8 and modify setting. Can set light work mode, control lamp and DMX channel mode..

Light includes 3 work mode: DMX MODE, AUTO RUN and SOUND MODE, Parameter definition as following:

- **DMX Mode:** Under this mode, the light receive data from the DMX controller and move.
- **AUTO RUN :** Under this mode, light will run with inside code(data), ignore data from DMX controller.
- **SOUND Ctrl:** Under this mode, light ignore data from DMX controller., When there is a strong sound in stage, the light will run a scene, otherwise it will keep the last scene.
- **M/S Choose:** 'M/S Choose' is available when light just in

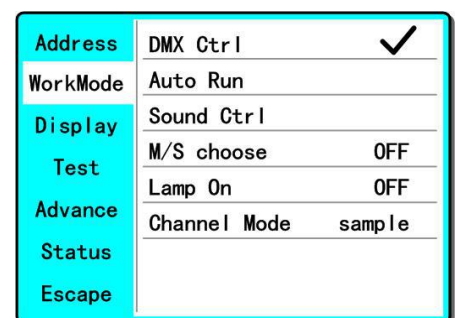


Figure 8 page of work mode


'AUTO RUN' or 'SOUND Ctrl' mode. If this item is set as 'OFF', the light don't send data to other light via DMX Cable. When 'ON', the data will send to other slave light immediately.

- **Lamp control :** Turn on lamp when this item is set 'ON', otherwise, turn off lamp. The gap between operation is limited to 30 second.
- **Channel mode:** Light support 2 DMX Channel mode: sample or extend。

9. Set display

Light support 2 language, rotation display, Enter page as shown in Figure9 to set parameter following:

- **Language:** Select display as simplified Chinese or English.
- **Screen Saver:** when panel is idle(these is no operation in 10 second), displayer will enter saver status. When set as 'mode 1', saver status is close display, as 'mode 2' saver status will display DMX address code(DMX MODE) or display LOGO(AUTO RUN or SOUND CTRL). As 'OFF', keep light up displayer and show main menu。

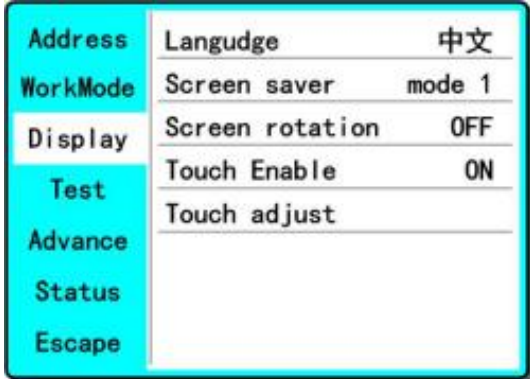

Address	Language	中文
WorkMode	Screen saver	mode 1
Display	Screen rotation	OFF
Test	Touch Enable	ON
Advance	Touch adjust	
Status		
Escape		

Figure9 page of display

- **Screen Rotation:** rotate displayer.
- **Touch enable:** Disable or enable touch function, when disable, use encoder to operate light and set parameter.
- **Touch adjust:** adjust touch function, normally, not enter this item.

10. Test light

Enter the page as shown in Figure 10, Light will into test mode, in this mode, the light does not receive the data for DMX controller.:

- PAN: range for 0 to 255;
- TILT: range for 0 to 255;
- FOCUS: range for 0 to 255;
- COLOR: range for 0 to 255;
- GOBO: range for 0 to 255;
- PRISM: range for 0 to 255;
- FROST: range for 0 to 255;;
- STROBE: range for 0 to 255;.

Address	PAN	000
WorkMode	TILT	000
Display	FOCUS	000
Test	COLOR	000
Advance	GOBO	000
Status	PRISM	000
Escape	FROST	000
	STROBE	000

Figure 10 page of Test

11. Set light run parameter

Enter the page as shown in Figure 10, set the parameter of light:

- Pan Invert: Reverse PAN move.
- Tilt Invert: Reverse TILT mover.
- Rectify enable : set as 'OFF', PAN or TILT will disable position rectify function. As 'ON', when PAN or TILT lose steps, light will rectify auto.
- Pan Offset: Set PAN original position.
- Tilt Offset: Set TILT original position.
- Lamp up when: Select lamp on mode, includes 3 mode: power on, after reset done and manual;
- Factory setting: restore all parameter to factory setting.

Address	PAN Inset	OFF
WorkMode	TILT Inset	OFF
Display	Rectify Enable	ON
Test	PAN Offset	008
Advance	TILT Offset	020
Status	Lamp on when	pwr on
Escape	Factory Setting	

Figure 11 page of run parameter

12. View status

Enter the page as shown in Figure 12:

[HTTP://WWW.SHEHDS.COM/](http://www.shehds.com/)

Address	Work Mode	DMX ...
WrokMode	Address	001
Display	Version	B5R. 1. 1 16n
Test	Elapse	000H 04M
Advance	Tatol	00000H 04M
Status	<div>DMX Clr</div> <div>SysRst</div>	
Escape		

Figure 12 page of status

- View light current status, version;
- DMXClr: Click to clear all DMX data to '0'.
- SysRst: Click to reset light.

Chapter 3 Channel description

Channel table

Light support 2 DMX mode: 16ch (Sample) and 20ch (extend), as shown in Table 1:

Table 1 Channel brief

MODE	CH	NAME	BRIEF
Sample 16CH	1	COLOR	Color mode
	2	STROBE	Strobe mode
	3	DIMMING	
	4	GOBO	Gobo shake
	5	PRISM	
	6	ROTATE PRISM	
	7	NONE	
	8	FROST	
	9	FOUSE	
	10	PAN	
	11	PAN FINE	
	12	TILT	
	13	TILT FINE	
	14	P/T SPEED	P/T & TILT scan speed
	15	RESET	Reset position
	16	LAMP	Lamp on/off
Extend 20CH	17	GOBO SPEED	
	18	COLOR SPEED	
	19	FOCUS SPEED	
	20	RUN MODE	
Channel details: www.shehds.com			