


Dynamic face cloud platform machine setup method


www.yunatt.com:82

1、 If the dynamic face device firmware version V1.28 is below, please upgrade the firmware to version V1.28


2、 Device Settings :

Setp 1:  ---<Comm>---<Comm>---<Mode> Select 'Internet'

Setp 2:  ---<Comm>---<Server>---<Server> Input : att.yunatt.com


 ---<Comm>---<Server>---<ServerPort> Input: 82

Setp3: Ethernet cable

 ---<Comm>---<Ethenet>---<DHCP> Select 'Yes'

WIFI

 ---<Comm>---<Wifi>---<Search>Select Wifi hot, Input Password

 ---<Comm>---<Wifi>---<DHCP>Select 'Yes'

Note: Ethernet and wifi only enable one, otherwise connection will fail attach:

'.' input method, **click**<Alt> Change the input method to<a> state, **double-click** 

