


The Diagram and Introduction of Mainboard Components (M60)

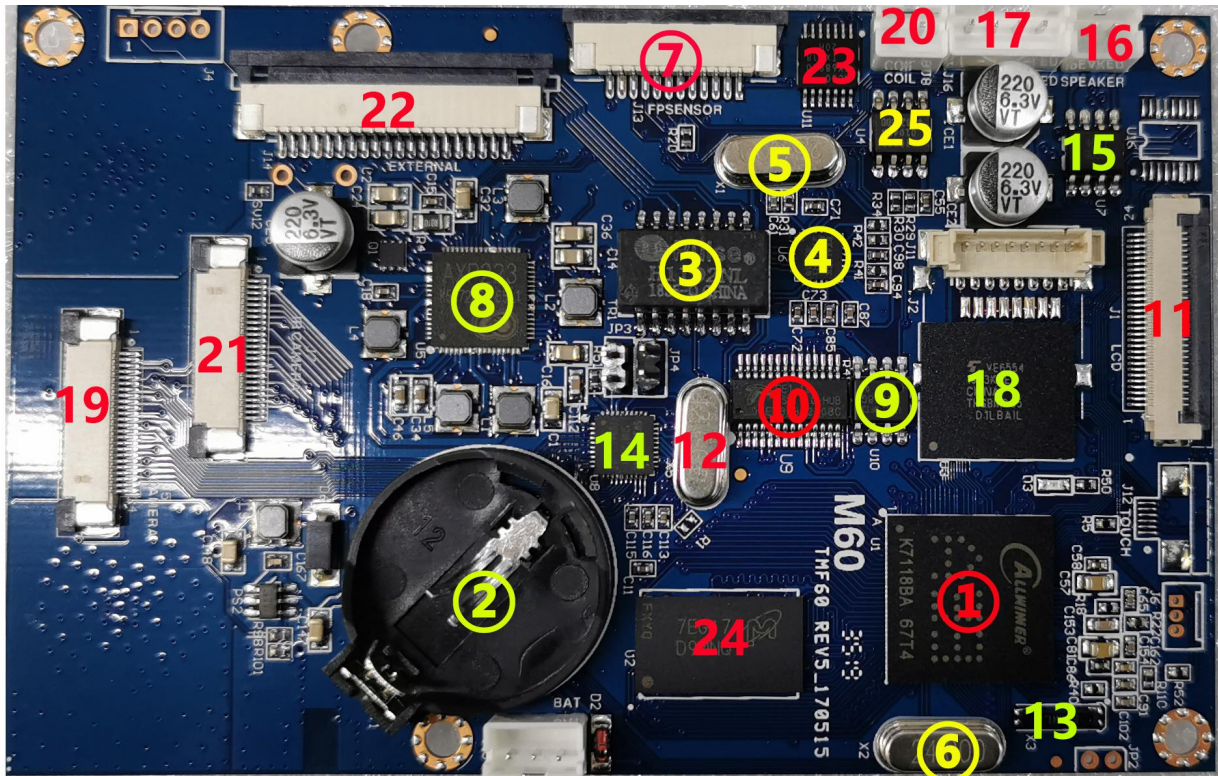

No	Name of components	Damaged Consequence
1	CPU	Start-up Disabled
2	3V Battery Slot	Machine Time resets to zero (Tip: Replace the battery)
3	Network filter	Network Connection Disabled or Data Packet Loss
4	Network chip	Network Connection Disabled
5	Network Crystal Oscillator	Network Connection Disabled
6	Start-up Crystal Oscillator	USB Connection Disabled or Start-up Disabled
7	Fingerprint Sensor Wire Socket	Fingerprint Punching Disabled
8	Power supply chip	Start-up Disabled
9	RFID Card chip	No reaction when you punch RFID card
10	Usb disk chip	USB disk Disabled
11	LCD Wire Socket	White screen display
12	Usb disk Crystal Oscillator	USB disk Disabled
13	Clock Crystal Oscillator	Time Running Stopped
14	Image Chip	No image
15	Voice Amplifier Chip	No sound
16	Speaker Connection Socket	No sound
17	Access control line interface	
18	Algorithm chip(Store data and firmware)	Start-up Disabled
19	650 Camera socket	No image
20	RFID Card module Socket	No reaction when you punch RFID card
21	850 Camera socket	No Face image
22	Power socket	Start-up Disabled
23	Fingerprint Chip	Fingerprint Punching Disabled
24	DRAM CHIP(store data)	Start-up Disabled
25	Encryption chip	Device error