



# PC28- External alarm settings

## 1. Hardware connection

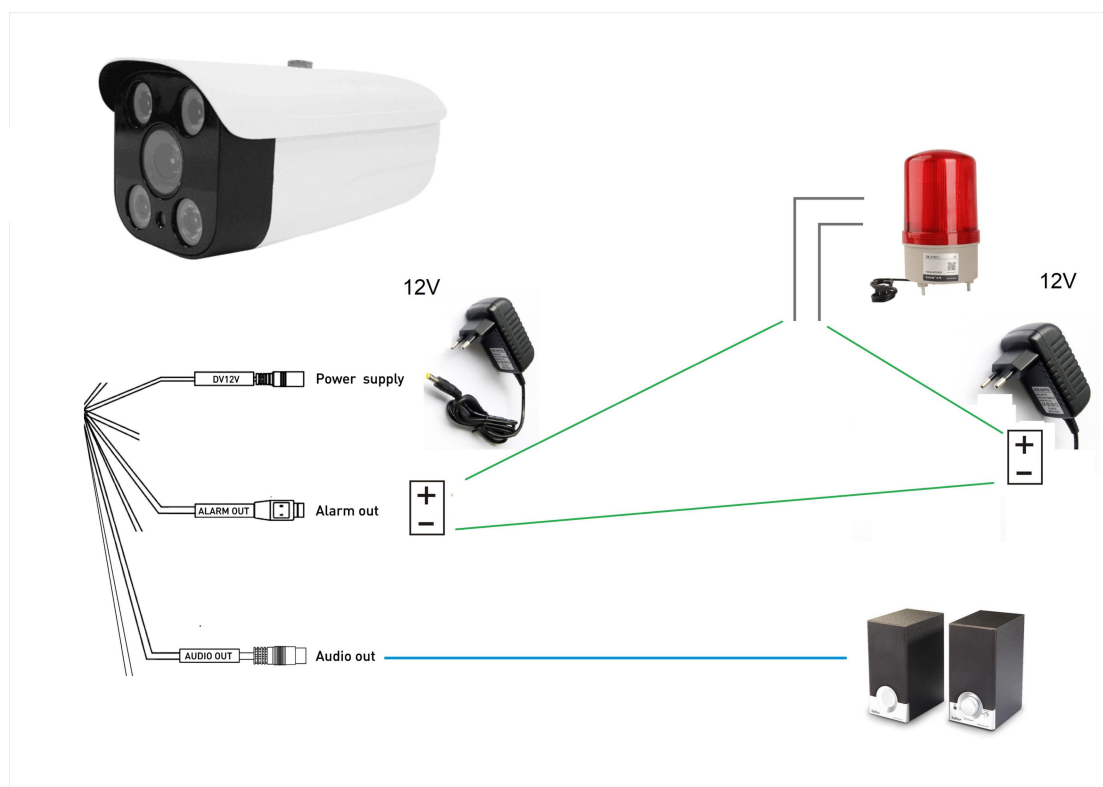

## 2. Limit number setting

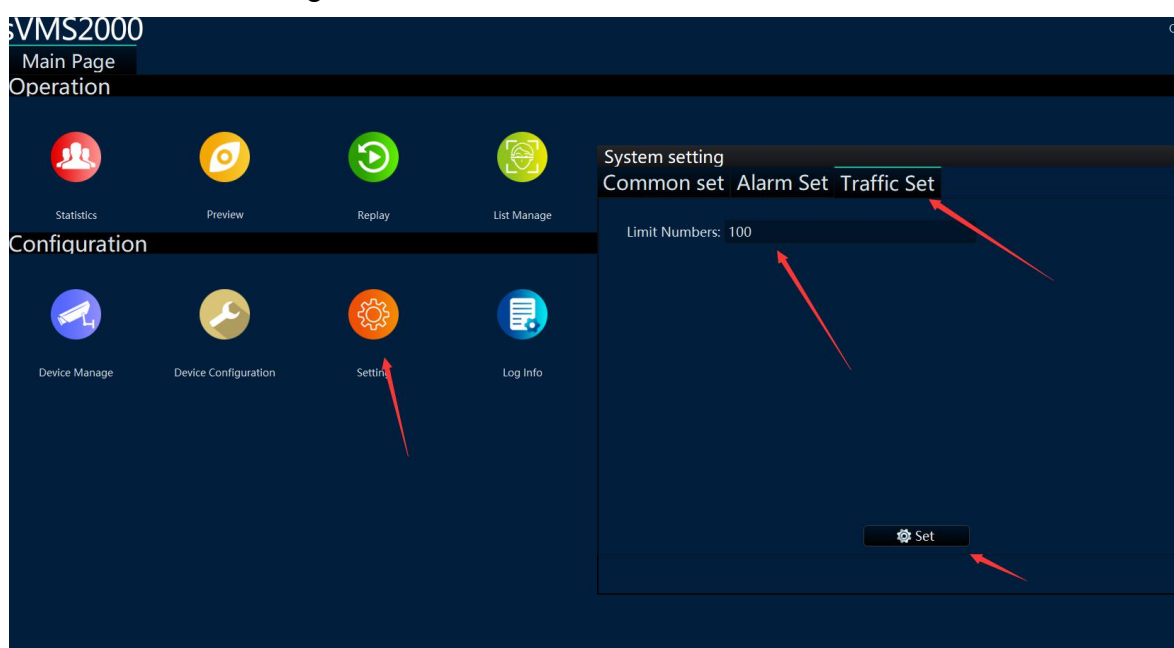

## 2. Alarm function setting

sVMS2000

The screenshot shows the main menu of the sVMS2000 system. At the top, there are two tabs: 'Main Page' and 'Device Config'. Below the tabs, there are two main sections: 'Operation' and 'Configuration'. The 'Operation' section contains four icons: Statistics (red), Preview (yellow), Replay (green), and List Manage (yellow-green). The 'Configuration' section contains five icons: Device Manage (blue), Device Configuration (yellow), Setting (orange), Log Info (blue), and User Manage (green). A red arrow points to the 'Device Configuration' icon.

sVMS2000

The screenshot shows the 'Device Configuration' page for a device at IP 192.168.1.88. The page is divided into several sections:

- Device List:** A table showing the device's IP address (192.168.1.88) and its group (Default Group).
- Device Information:** A table showing the device's IP (192.168.1.88), Version (16.10.3.248), and Web Version (Face\_21.1.8.G).
- Video Set:** A section with two buttons: 'Stream Parameter' and 'Audio Parameter'.
- Smart parameters:** A section with two buttons: 'People Counting' and 'Face parameters'. A red arrow points to the 'People Counting' button.
- Common Set:** A section with four buttons: 'Network Info', 'System Info', 'Time Parameters', and 'Http'.

Draw Rule Clear  Default

Draw Line Clear  Default

Enable

Time1 00:00 -- 23:59

Time2 00:00 -- 23:59

Flowrate Alarr Open

Initial number 0

Number of st 100

Alarm Interval 60 s

Alarm duratio 5 (0-60s)

IO output: Open

IO output typ NC

Mask detect

Clear count

Timed clear 00:00:00

Save