


Installation steps


01

Stripping off about 40mm of wire outer cover Everted woven mesh and ground wire

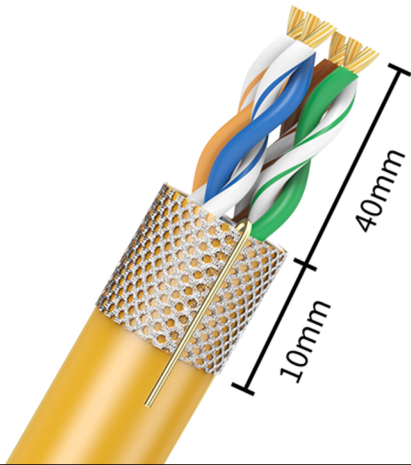


02

Aft that wire cores are straighten, According to the requirements of color code line sequence Insert the twisted pair into the correct slot

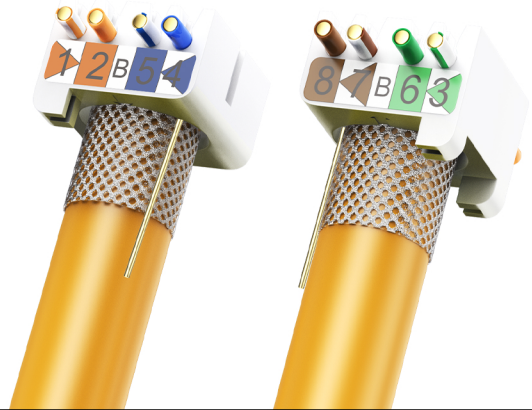


03

Flush the slot position and cut off the excess cores It is recommended not to exceed 0.2mm

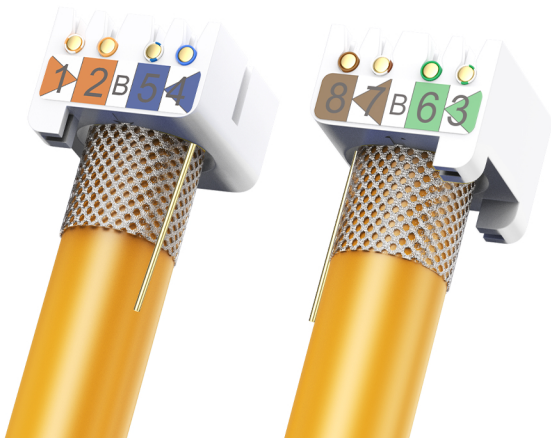

04

Corresponding to any mark shown in the figure Place the traverse into the module body

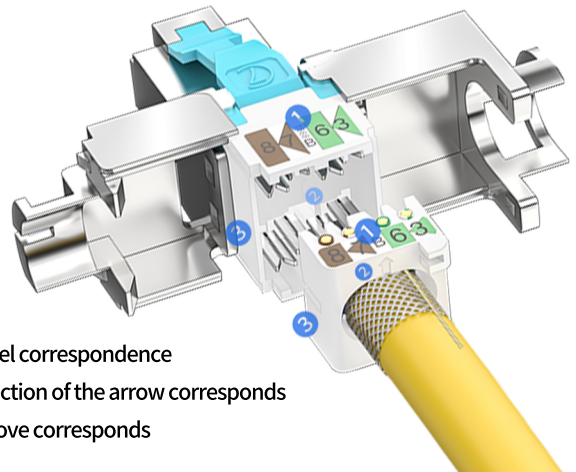

05

Close the outer covers on both sides Make sure the snap is fastened The installation is complete

