


Installation steps

01

Stripping off about 40mm of wire outer cover Cut off the cross core

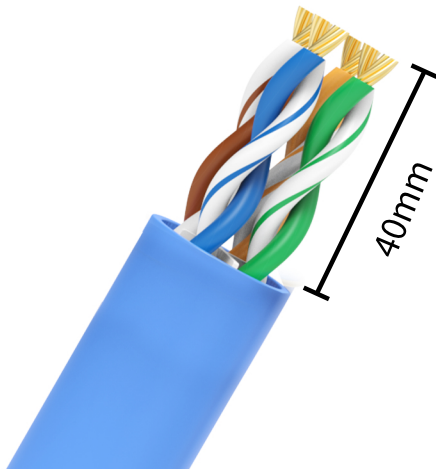

02

Insert the twisted pair into the correct slot according to the color-coded wire sequence after running the cores together.




03

Flush the slot position and cut off the excess cores It is recommended not to exceed 0.2mm



04

Corresponding to any mark shown in the figure Place the traverse into the module body

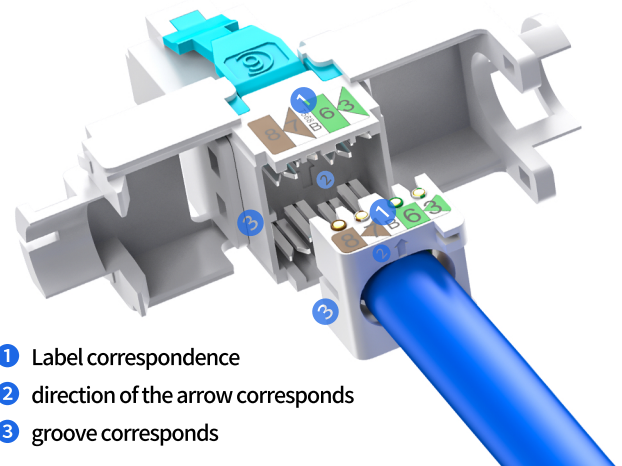

05

Close the outer covers on both sides Make sure the snap is fastened The installation is complete

