



Installation steps

1.Strip the wire jacket about 40mm Cut off the cross core

U/FTP F/UTP: Wrap the bobbin thread 10mm
S/FTP: turn the weaving net 10mm outward
(This operation can be adequately grounded and shielded)

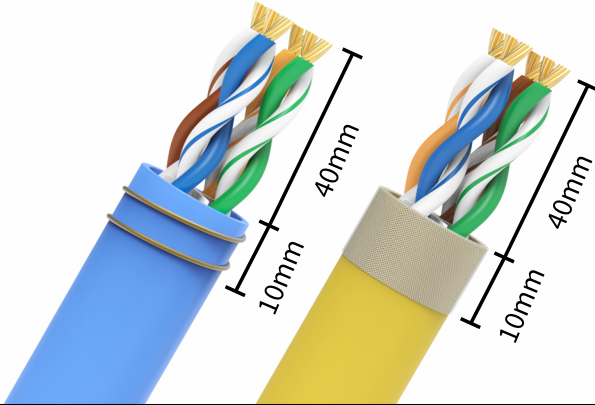


2.Wrap the wire with copper foil tape (press the ground wire or shield the braid) and put the nut behind the wire

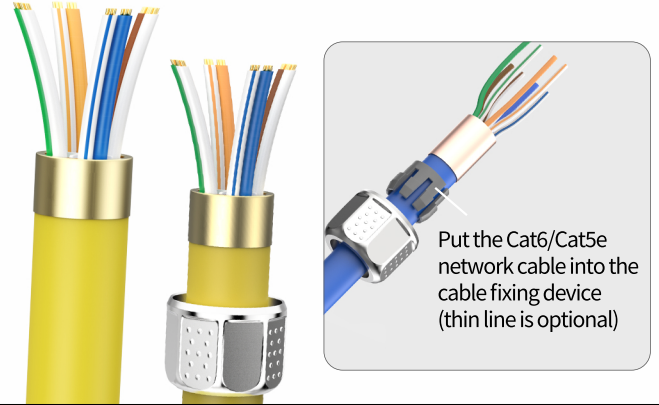


3.Pass the cable through the wiring cover, according to the wire sequence requirements of T568B (corresponding to the color code identification)


Insert the twisted pair into the correct slot

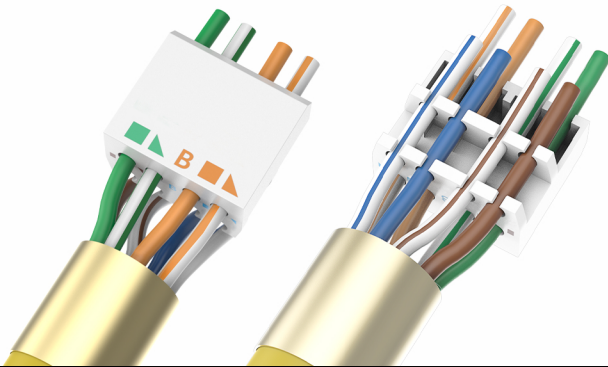

4.Flatten the slot and then cut off the upper thread first. It is recommended not to exceed 0.2mm

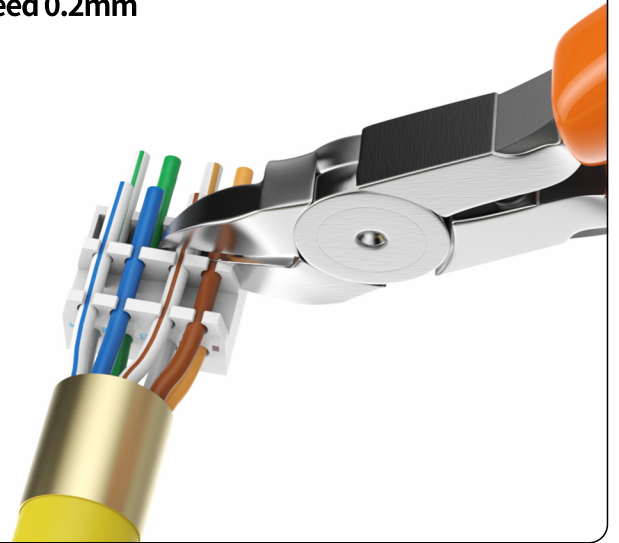

5.Flatten the slot and then cut off the lower thread. It is recommended not to exceed 0.2mm

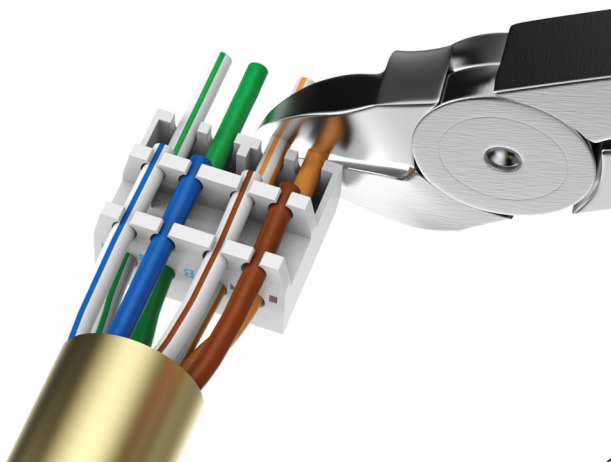

6.Press the wiring cover with the wires in according to the corresponding direction, tighten the nut, and the installation is done.

