


# X Series I/O Modules

## 2CH RS485+2CH CAN BUS Module X22

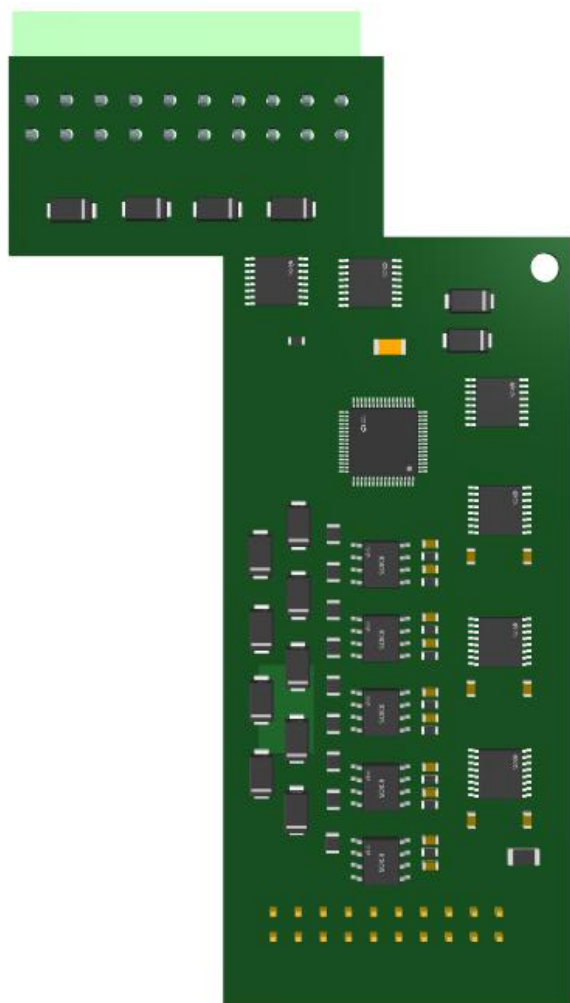

### X22

## User Manual

Version: V1.0

Date: 2025-4-9

Shenzhen Beilai Technology Co.,Ltd

Website: <https://www.bliiot.com>

## Preface

Thanks for choosing BLIIOT X series I/O modules. These operating instructions contain all the information you need for operation of X series I/O modules.

## Copyright

This user manual is owned by Shenzhen Beilai Technology Co., Ltd. No one is authorized to copy, distribute or forward any part of this document without written approval of Shenzhen Beilai Technology. Any violation will be subject to legal liability.

## Disclaimer

This document is designed for assisting user to better understand the device. As the described device is under continuous improvement, this manual may be updated or revised from time to time without prior notice. Please follow the instructions in the manual. Any damages caused by wrong operation will be beyond warranty.

## Revision History

Revision Date	Version	Description	Owner
2025/4/9	V1.0	Initial Release	PH

## Table of Contents

1 Introduction .....	4
1.1 Overview .....	4
1.2 Technical Specifications .....	4
1.3 Model Selection .....	5
2 Wiring .....	6
2.1 Terminal Definitions .....	6
2.2 Connection Example .....	7
2.2.1 RS485 Connection .....	7
2.2.2 RS232 Connection .....	8
2.2.3 CAN BUS Connection .....	9
3 Warranty Terms .....	9
4 Technical Support .....	9

# 1 Introduction

## 1.1 Overview

X22 is an industrial-grade expansion module specifically designed for the ARMxy series of ARM embedded industrial computers. This module features electrical isolation, overvoltage protection, ESD protection, fault protection, and overcurrent protection circuitry to ensure stability and reliability in complex industrial environments. The X22 offers two selectable RS485 or RS232 communication channels, along with two CAN bus interfaces, significantly expanding the I/O capabilities of the ARMxy series embedded computers.

X22's two serial ports support baud rates of up to 10Mbps and are compatible with both full-duplex and half-duplex communication modes.

## 1.2 Technical Specifications

Name	Parameter	Description
Power Supply	Operating Power	Internal Voltage
	Working Voltage	12V-24V
	Power Consumption	0.256W
RS485/RS232	Channel	2 Channels
	Transmission Mode	Optional: 2×RS232 or 2×RS485
	Maximum Baud Rate	RS232: 115kbps RS485: 10Mbps
	Data Bits	RS232: 5-bit, 6-bit, 7-bit, 8-bit (configurable) RS485: 5-bit, 6-bit, 7-bit, 8-bit (configurable)
	Stop Bits:	RS232: 1-bit, 2-bit (configurable) RS485: 1-bit, 2-bit (configurable)
	Parity	RS232: Odd parity, Even parity, No parity (configurable) RS485: Odd parity, Even parity, No parity (configurable)
	Flow Control	RS232: Not supported RS485: Not supported
	Impedance	RS232: Input impedance 300 Ω, Output impedance 3 kΩ RS485: 120 Ω
	Measured Distance and Operating Baud Rate	RS232: 15 meters (baud rate ≤ 1200 bps) RS485: 200 meters (baud rate ≤ 115200 bps)


	Supports Multi-Drop Communication	RS232: Not supported RS485: Requires custom development	
	Communication Mode	RS232: Full-duplex / Half-duplex / Simplex RS485: Unidirectional Half-duplex / Simplex	
	Data Transmission Mode	RS232: Transmit and receive mode, Receive-only mode, Transmit-only mode RS485: Transmit and receive mode, Receive-only mode, Transmit-only mode	
	Logic Level	RS232	Logic "1": 1.5 V
			Logic "0": 2.4 V
		RS485	Logic "1": -3 V
			Logic "0": +3 V
Maximum Output Current per Channel	250mA (at 26°C)		
Isolation Protection	2KVrms (built-in)		
Communication Cable Requirements	Shielded twisted pair cable		
CAN	Channel	2 Channel	
	Transmission Mode	CAN BUS	
	Maximum Baud Rate	Nominal Bit Rate: 1000Kbps Data Bit Rate: 5000Kbps	
	Flow Control	Not supported	
	Impedance	45KΩ	
	Measured Distance and Operating Baud Rate	200 meters (baud rate = 500 Kbps)	
	Multi-Node Communication	Support	
	Maximum Output Current per Channel	120mA (26°C)	
	Isolation Protection	2KVrms (built-in)	
	Communication Cable Requirements	Shielded twisted pair cable	
Certifications	EMC	IEC 61000-4-2 (ESD) Level 3	
		IEC 61000-4-4 (EFT) Level 3	
		IEC 61000-4-5 (Surge) Level 3	

### 1.3 Model Selection

No.	Name	Model	Signal Type
1	2CH RS485+2CH CAN BUS	X22	RS485: Differential signal RS232: Digital signal CAN: Differential signal

## 2 Wiring

### 2.1 Terminal Definitions

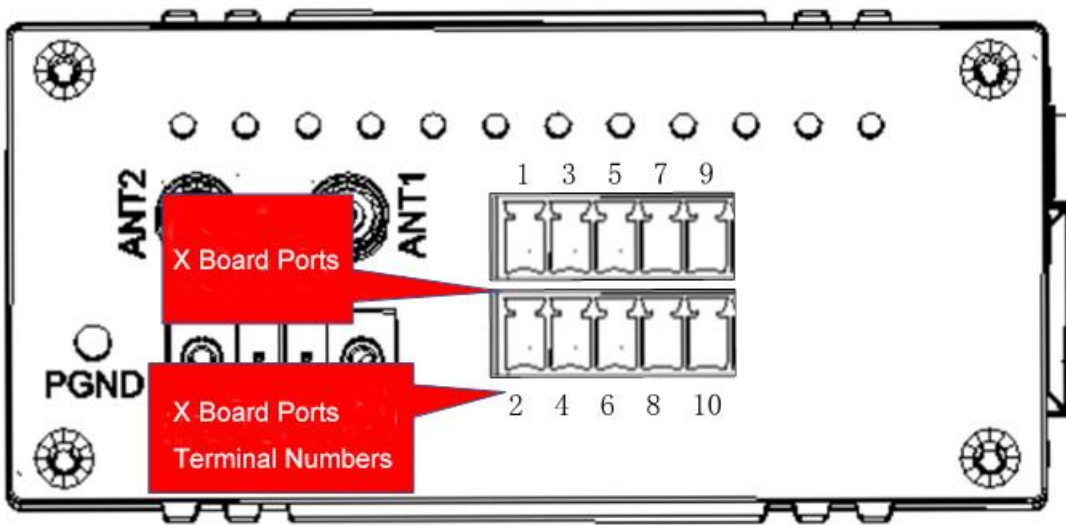


Notice: Please refer to the product's label for the specific terminal numbering sequence.


Terminal NO.	Definition	Description	Terminal NO.	Definition	Description
1	GND	Ground Terminal	2	GND	Ground Terminal
3	Channel 1 - A	RS485-A RS232-TX	4	Channel 1 - B	RS485-B RS232-RX
5	Channel 2 - A	RS485-A RS232-TX	6	Channel 2 - B	RS485-B RS232-RX
7	CAN1	CAN1-H	8	CAN1	CAN1-L
9	CAN0	CAN0-H	10	CAN0	CAN0-L

## 2.2 Connection Example


### 2.2.1 RS485 Connection

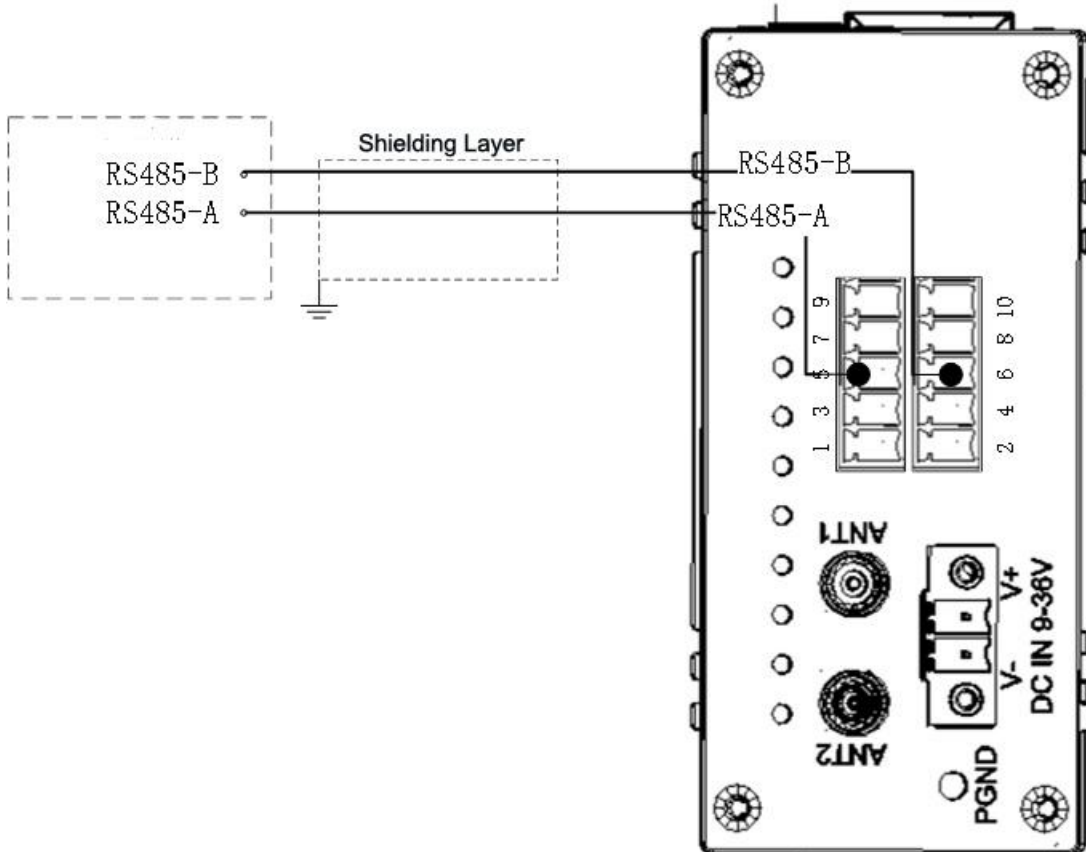

## 2.2.2 RS232 Connection

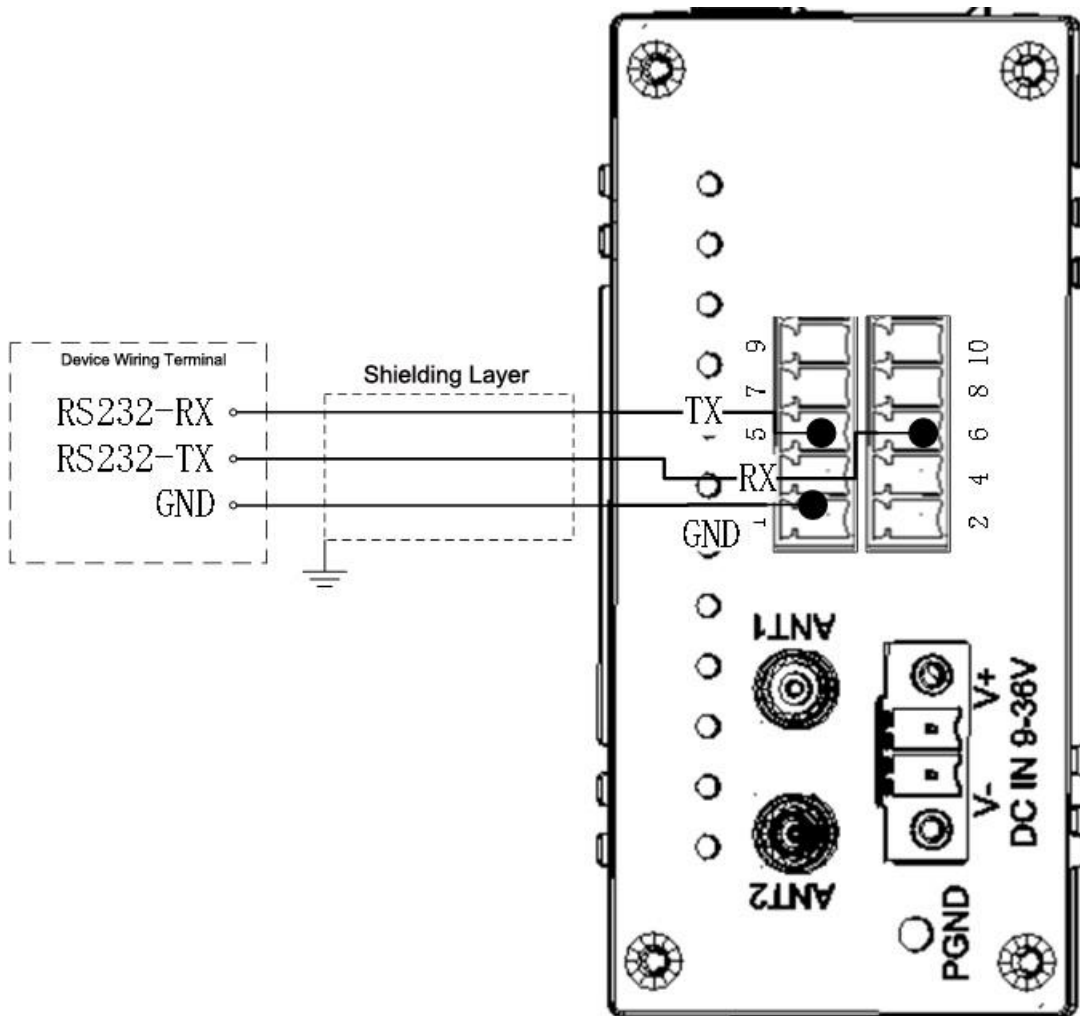

## 2.2.3 CAN BUS Connection

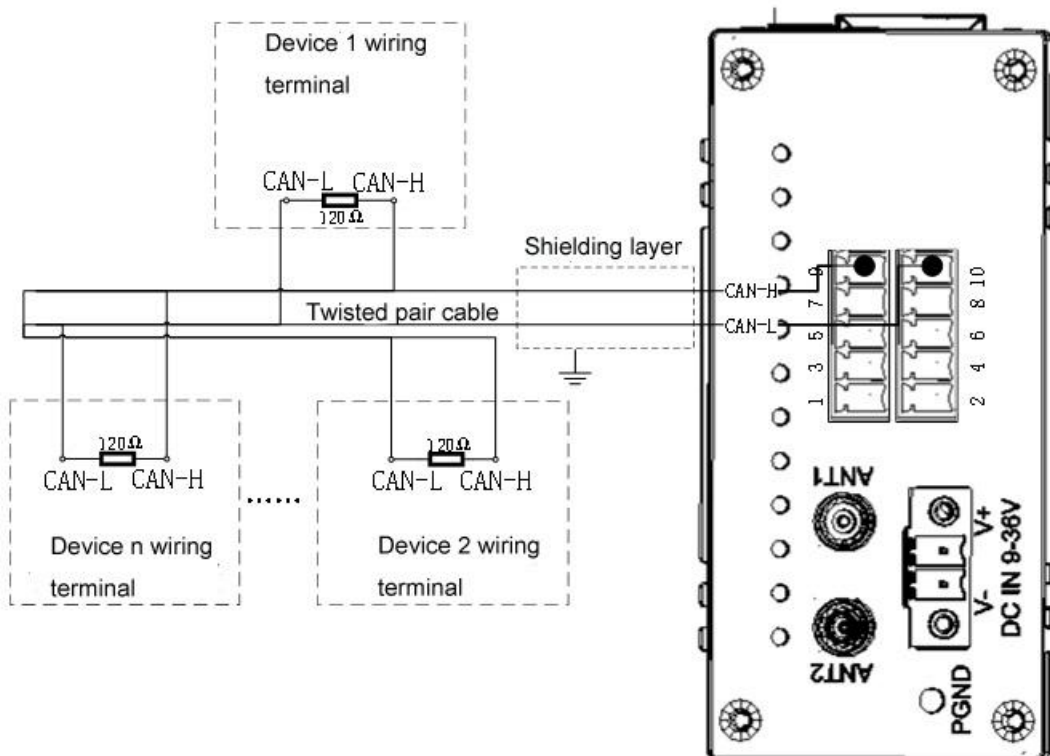

## 3 Warranty Terms

- 1) This equipment will be repaired free of charge for any material or quality problems within one year from the date of purchase.
- 2) This one-year warranty does not cover any product failure caused by man-made damage, improper operation, etc

## 4 Technical Support

Shenzhen Beilai Technology Co., Ltd

Website: <https://www.bliiot.com>